


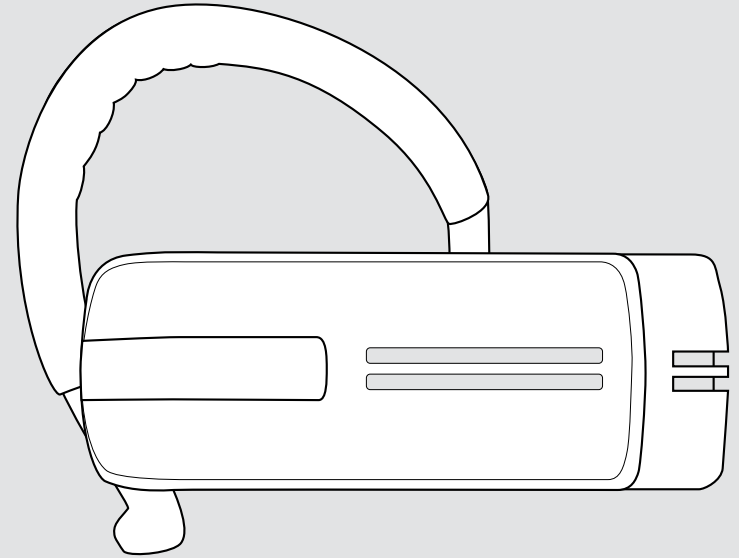

ADAPT Presence Grey

Battery Removal Guide







DSEA A/S

Kongebakken 9, DK-2765 Smørum, Denmark
www.eposaudio.com

Publ. 12/21, A01

Battery Removal Guide

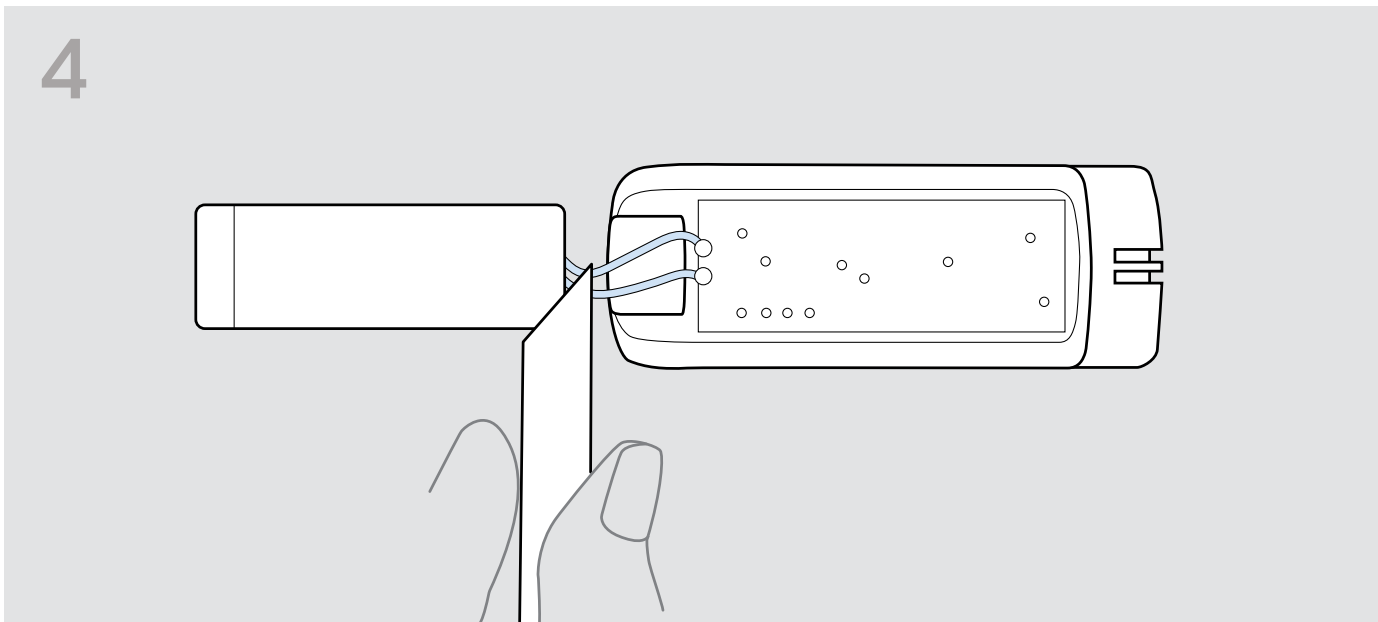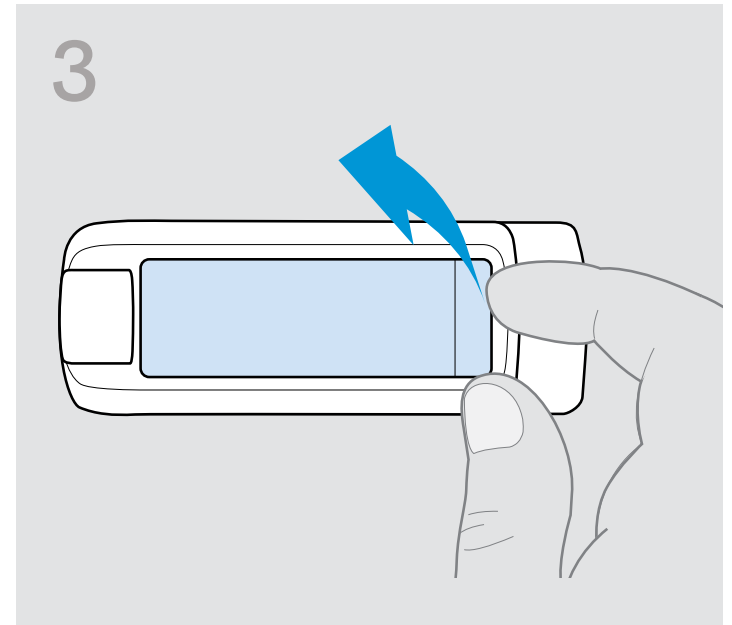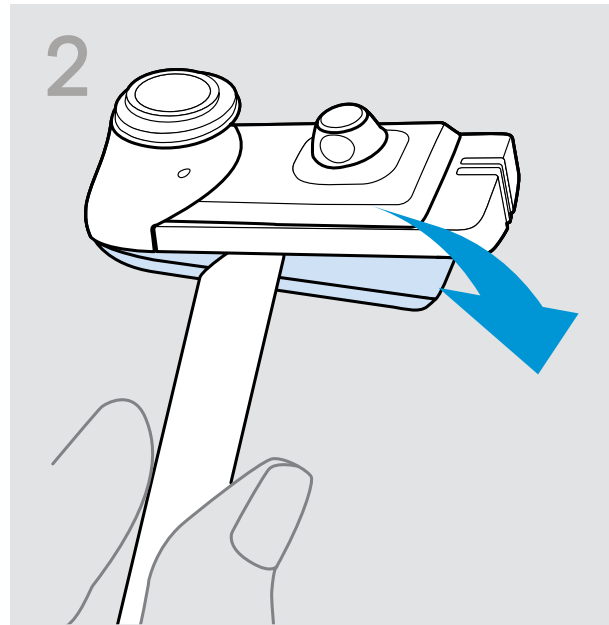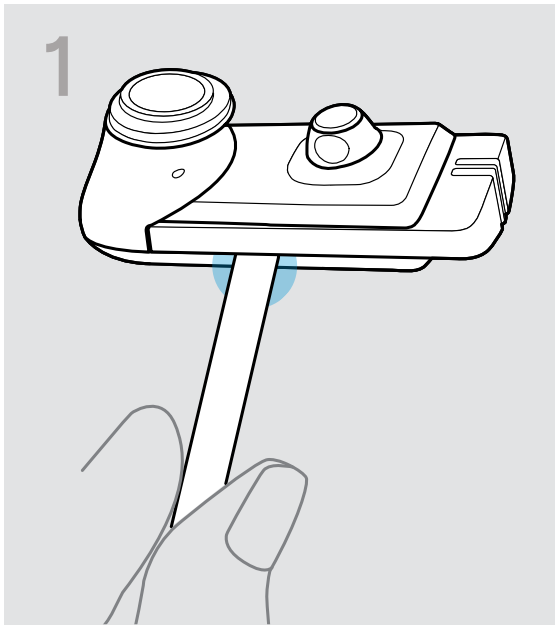

1. Use tweezers or a knife to loosen the glue on both housing sides.
2. Insert a metal sheet and pry open the plastic frame.
3. Lift the rechargeable battery.
4. Cut the cables of the rechargeable battery and remove it.