


# EPOS

EXPAND SP 20

## Battery Removal Guide

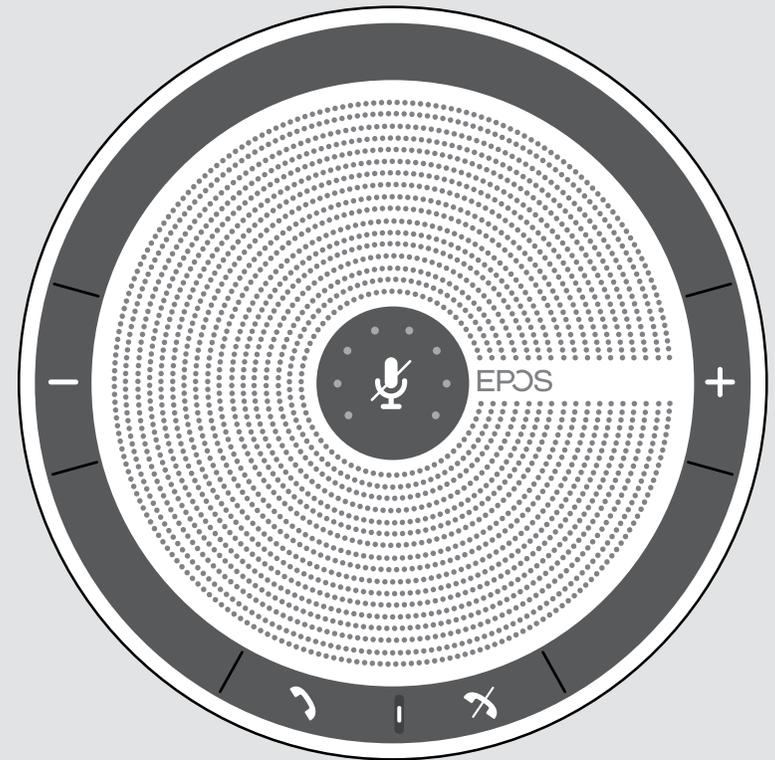





DSEA A/S

Kongebakken 9, DK-2765 Smørum, Denmark  
[www.eposaudio.com](http://www.eposaudio.com)

Publ. 12/21, A01




THE POWER OF AUDIO

# Battery Removal Guide

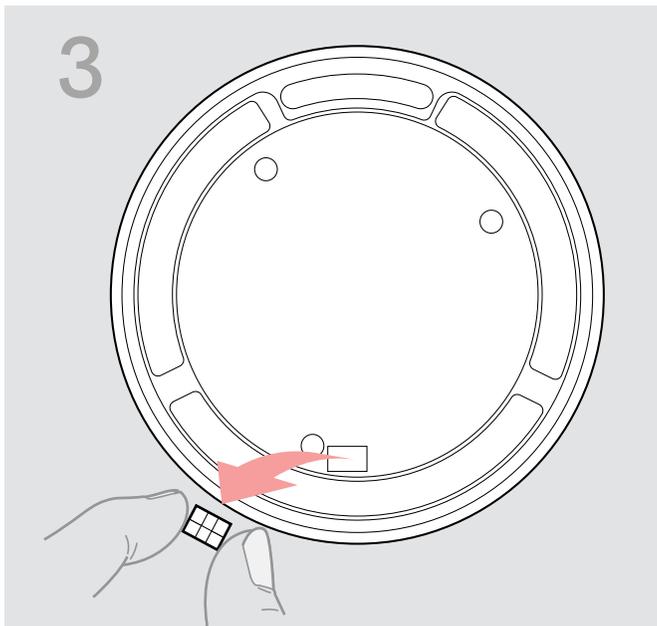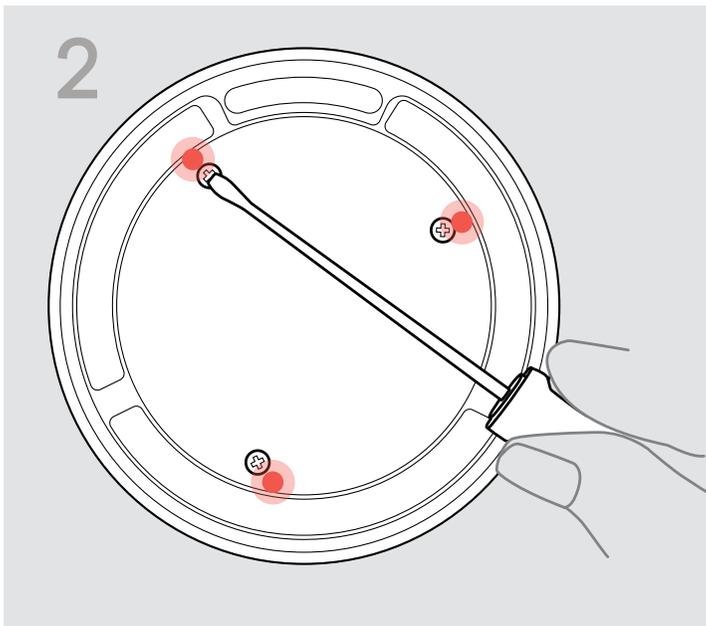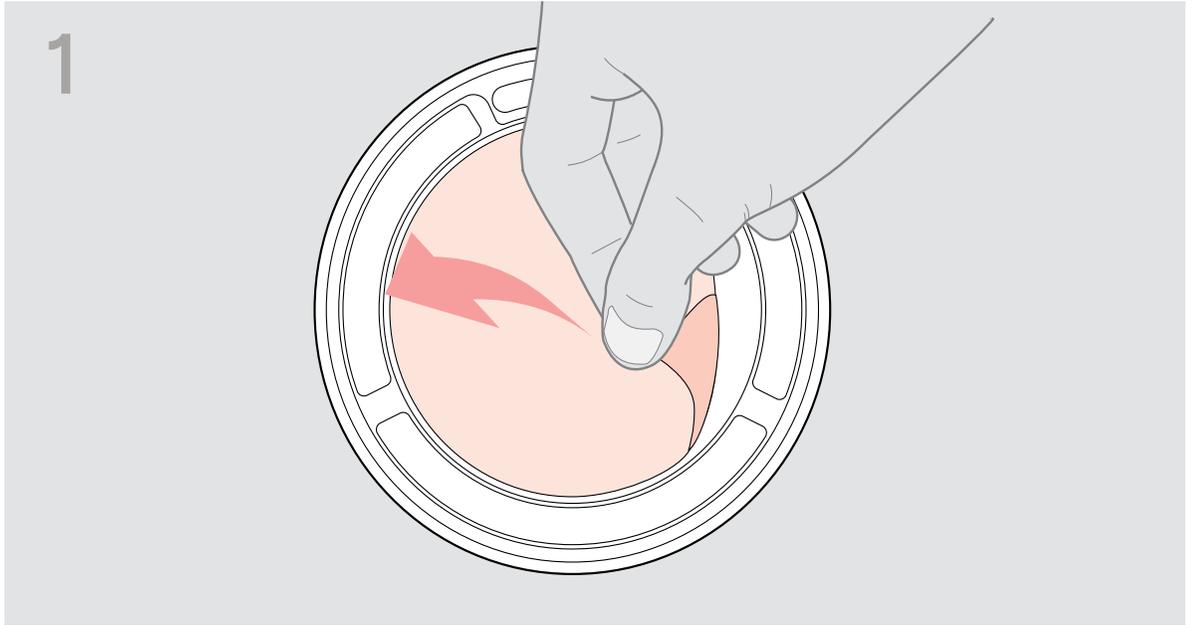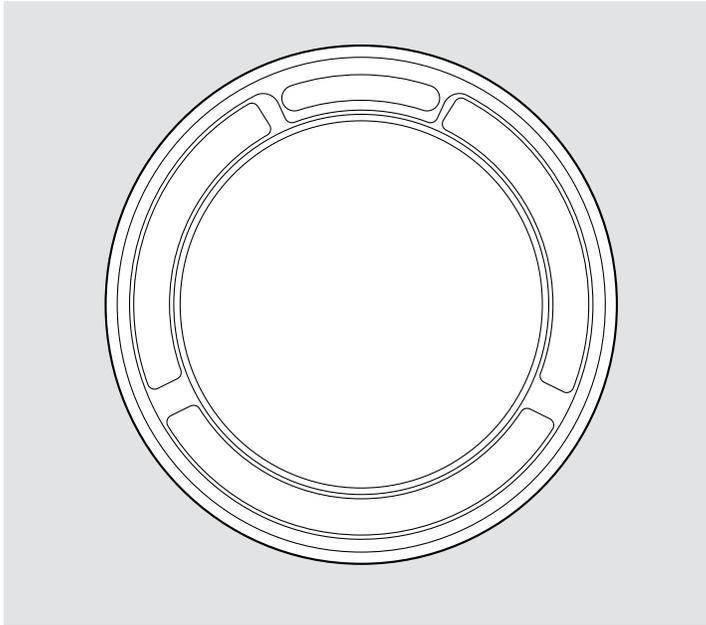




1. Peel off the bottom label.
2. Remove the 3 screws with a screwdriver.
3. Unplug the rubber.

# Battery Removal Guide

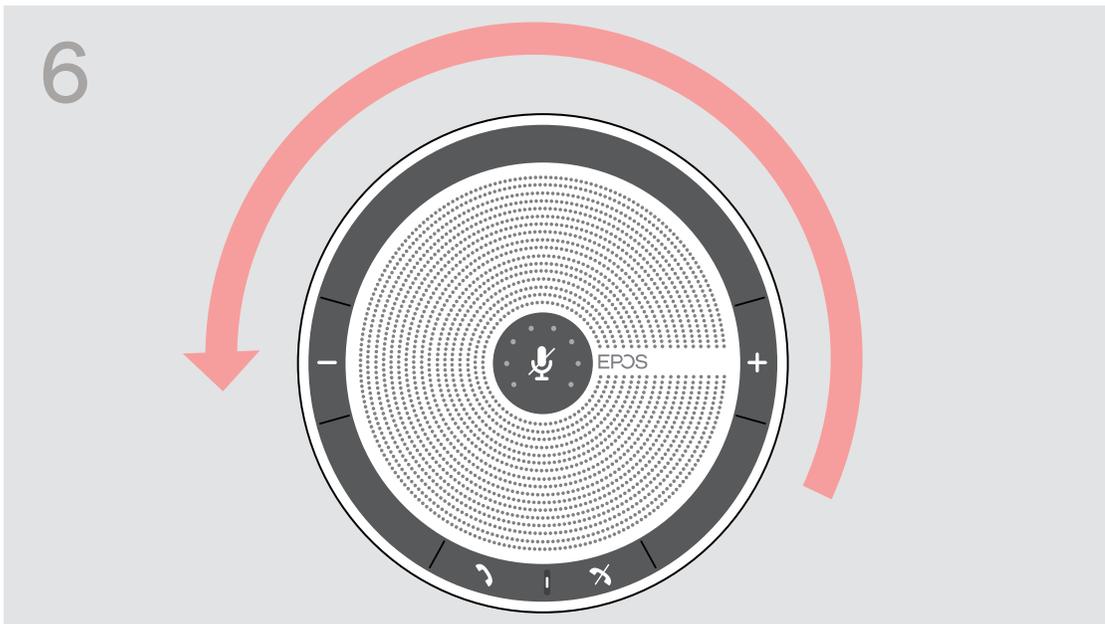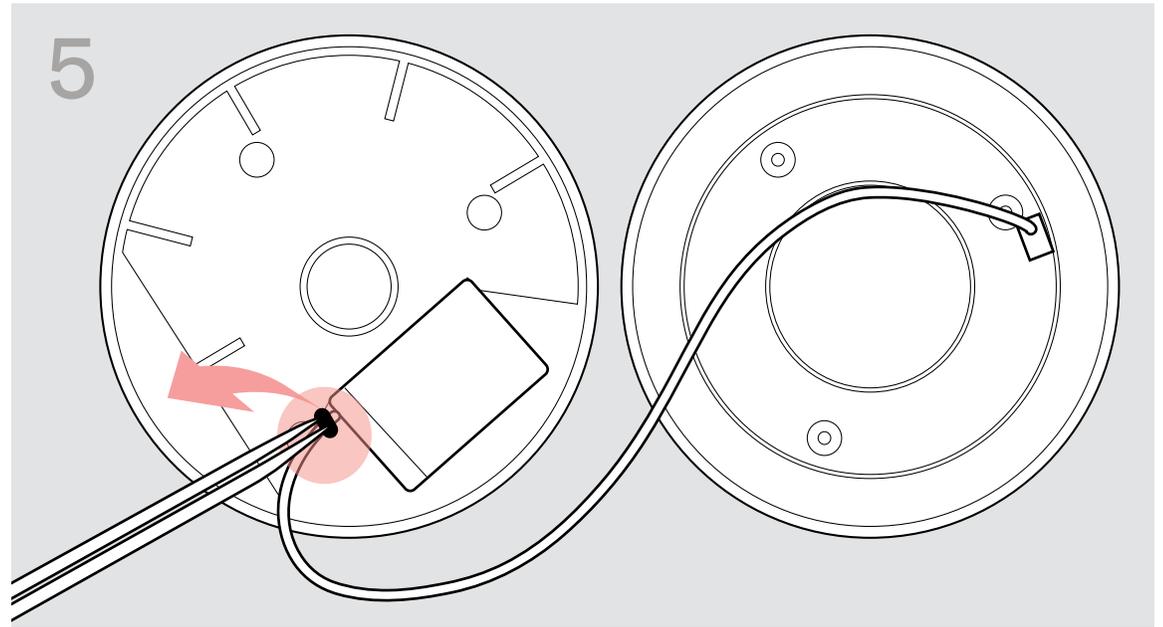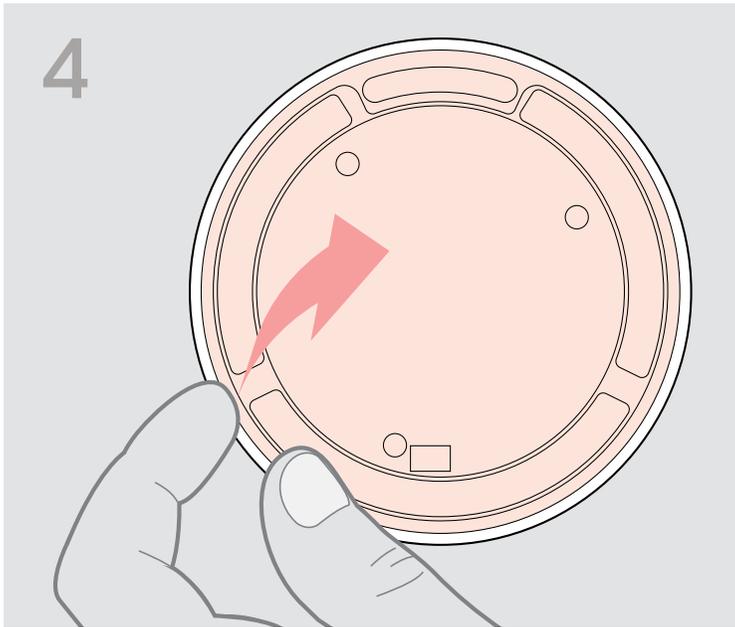

4. Open the lid.
5. Remove the black glue that fixes the cable e.g. with a pair of tweezers.
6. Rotate the top cover counterclockwise and open it up.

# Battery Removal Guide

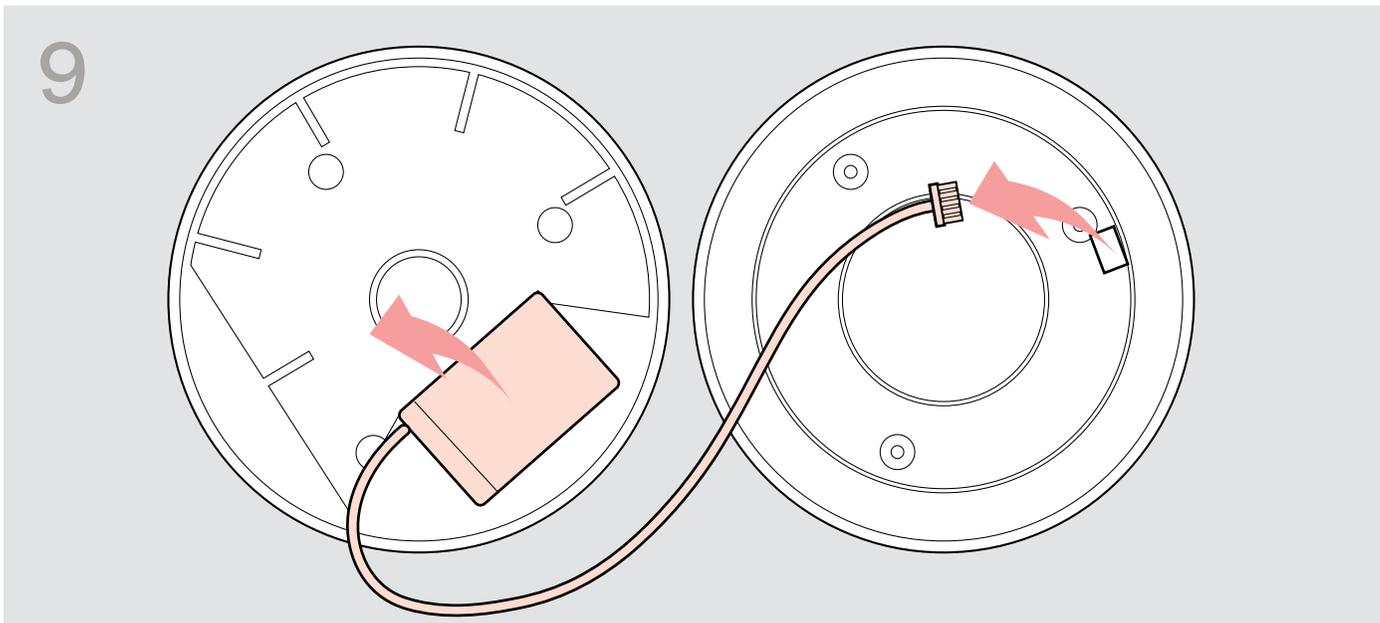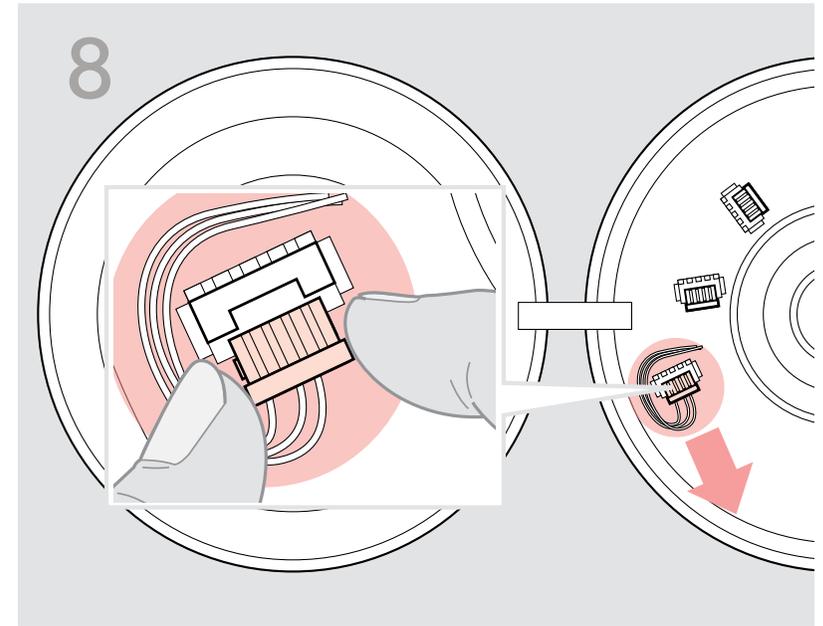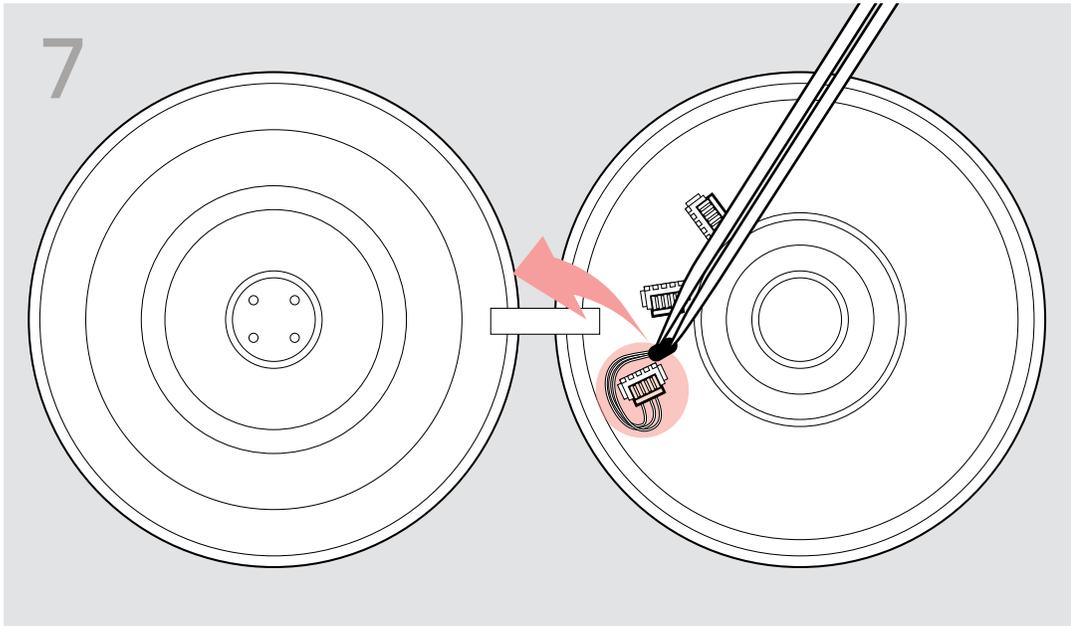

7. Remove the black glue that fixes the cable e.g. with a pair of tweezers.
8. Unplug the connector of the rechargeable battery.
9. Pull out the cable and remove the rechargeable battery.