
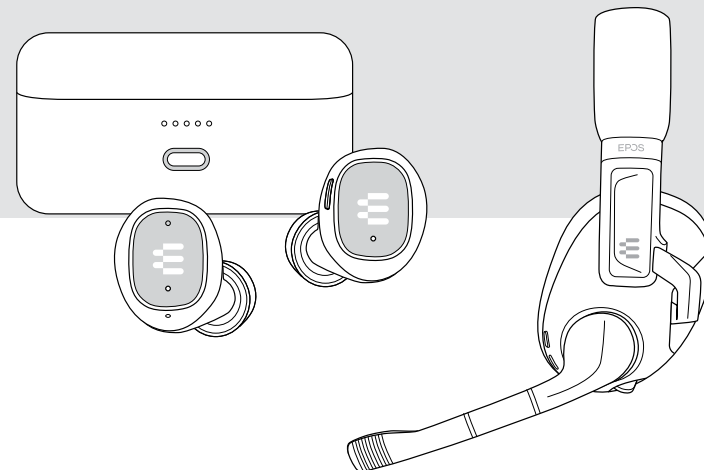
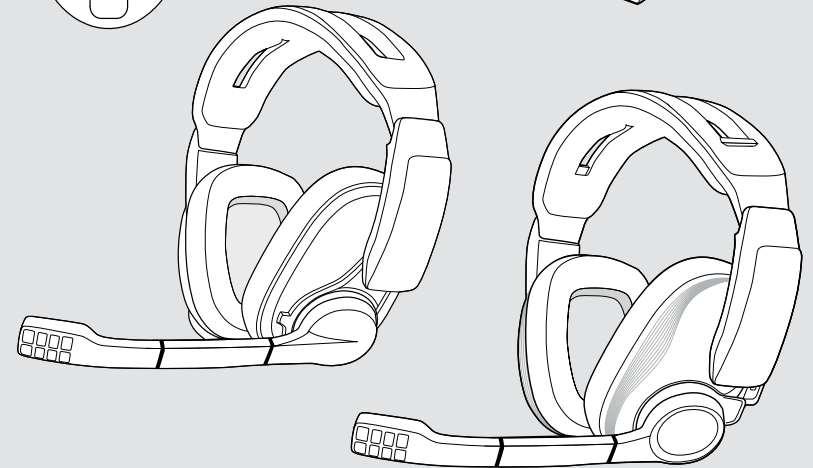


EPOS Gaming products

## Battery Removal Guides

C20 .....	1
C50 .....	4
GSP 370.....	8
GSP 670 .....	11
GTW 270   GTW 270 Hybrid.....	14
H3 Hybrid   H3PRO Hybrid.....	19

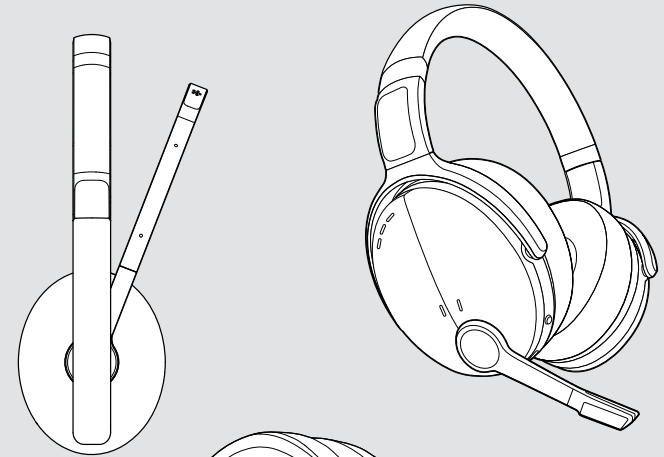

DSEA A/S

Kongebakken 9, DK-2765 Smørum, Denmark


[www.eposaudio.com](http://www.eposaudio.com)

Publ. 05/22, A01





EPOS

C20

# Battery Removal Guide



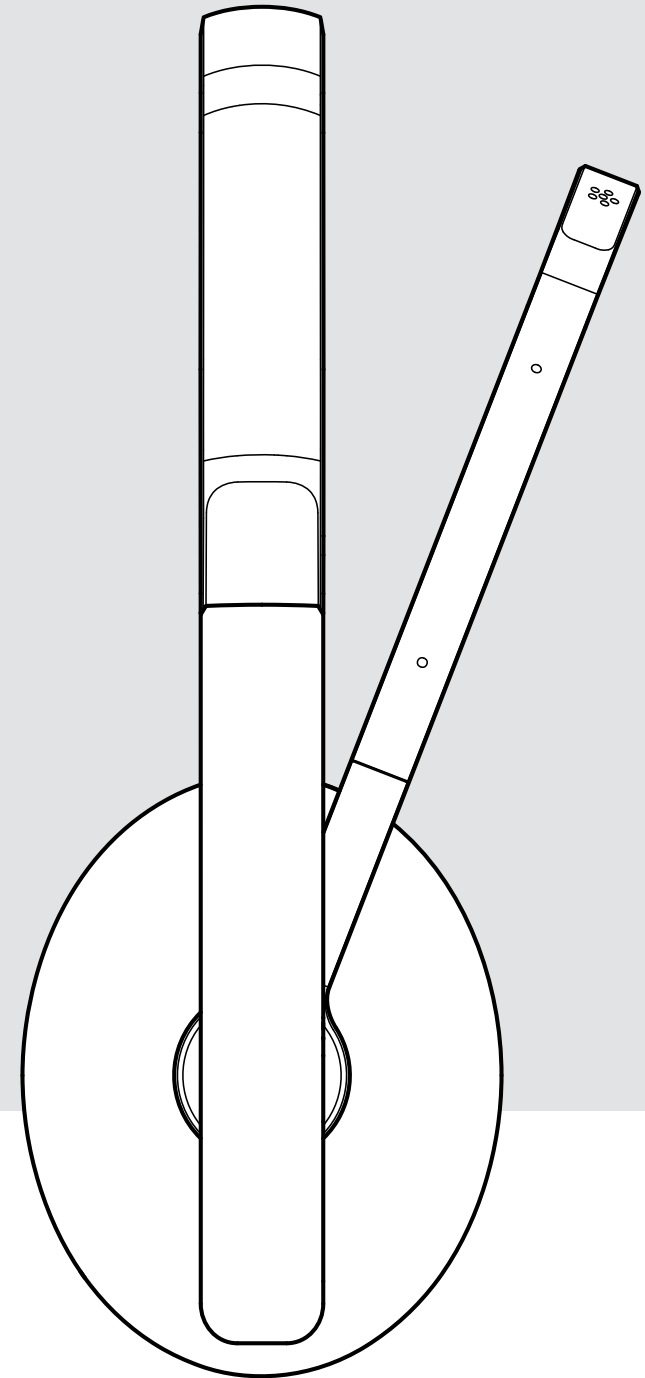


# Battery Removal Guide

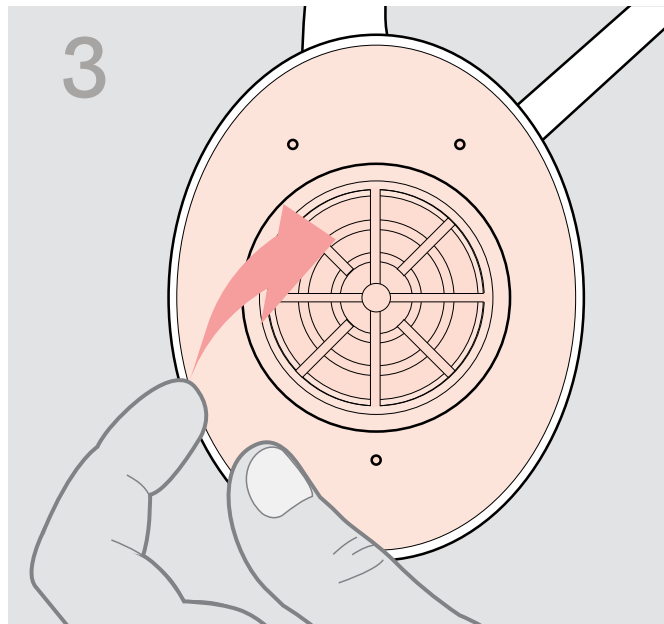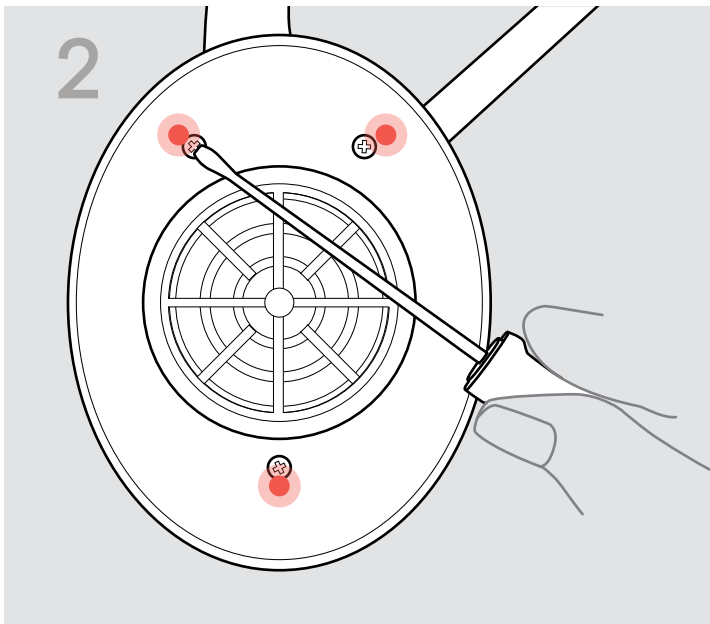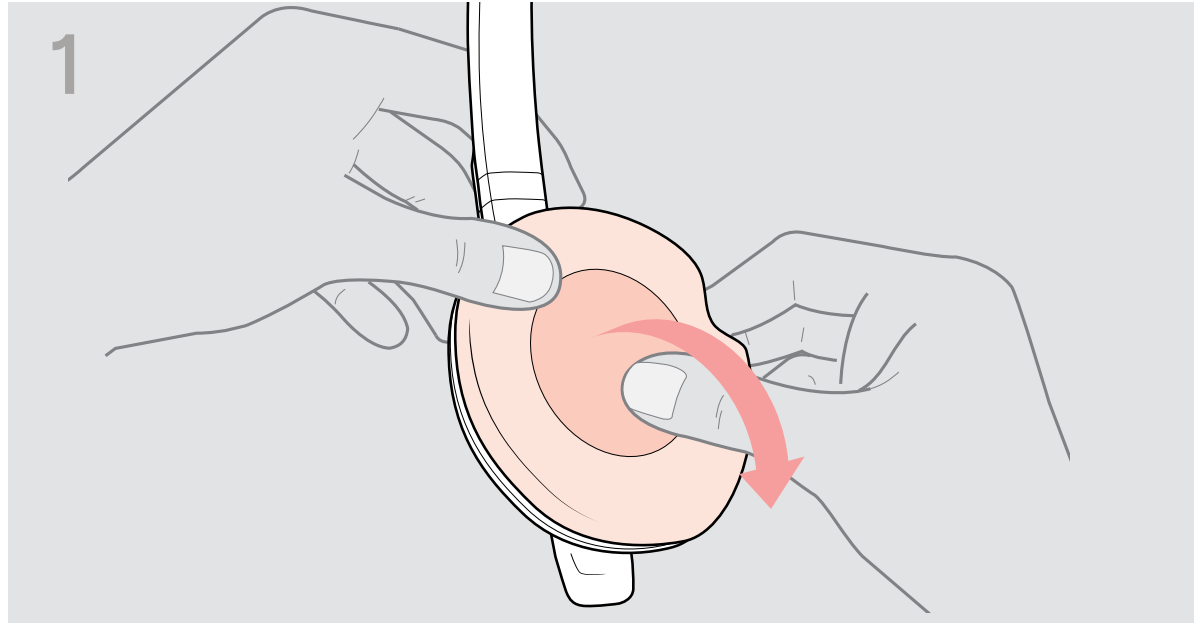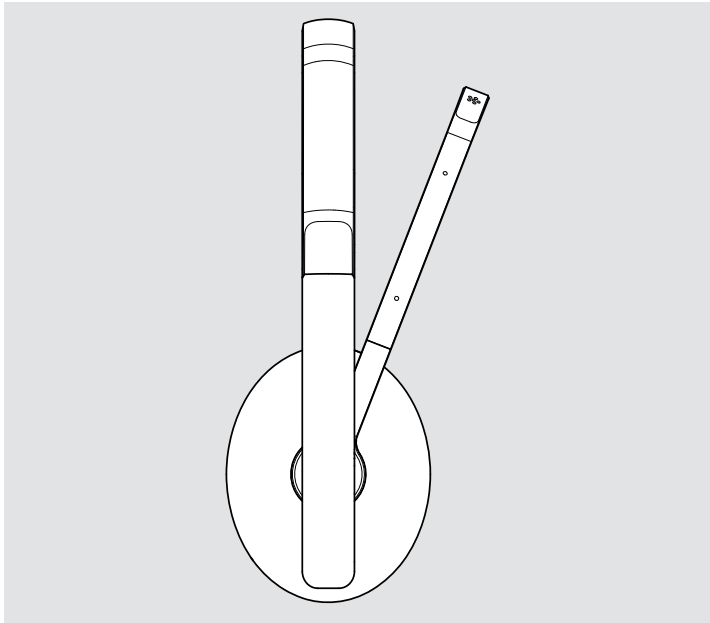

1. Remove the ear pad from the ear cup at the microphone side.
2. Remove the 3 screws with a screwdriver.
3. Lift the cover on the left-hand side.

# Battery Removal Guide

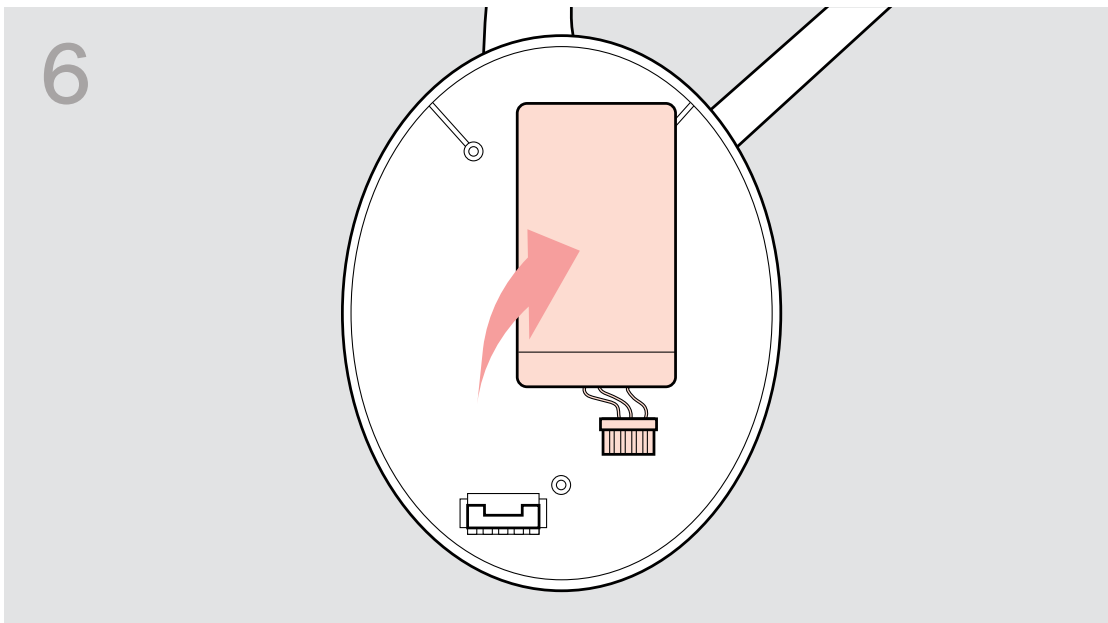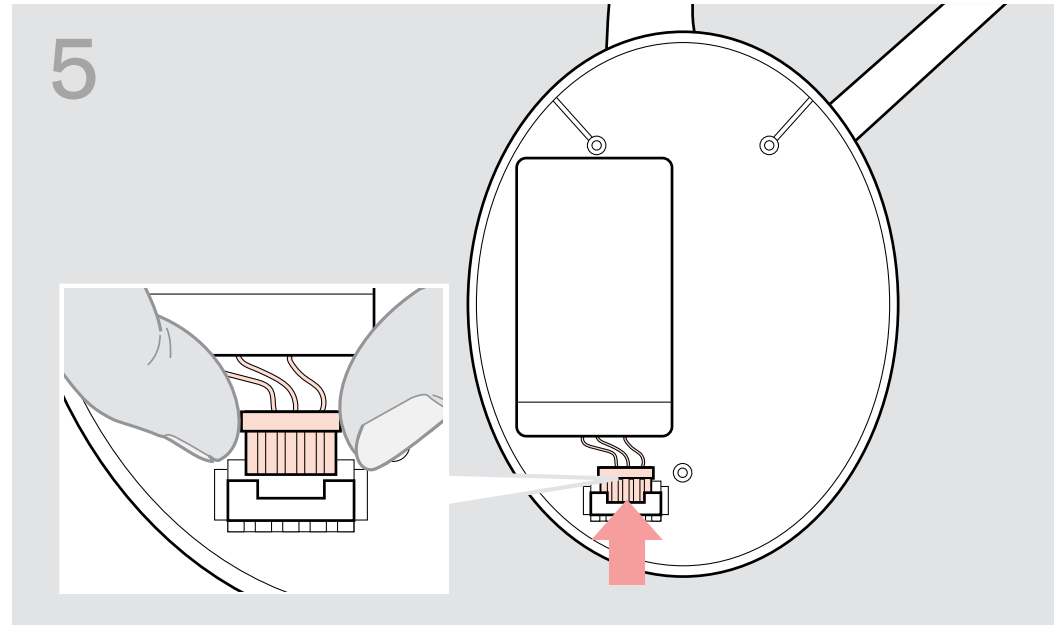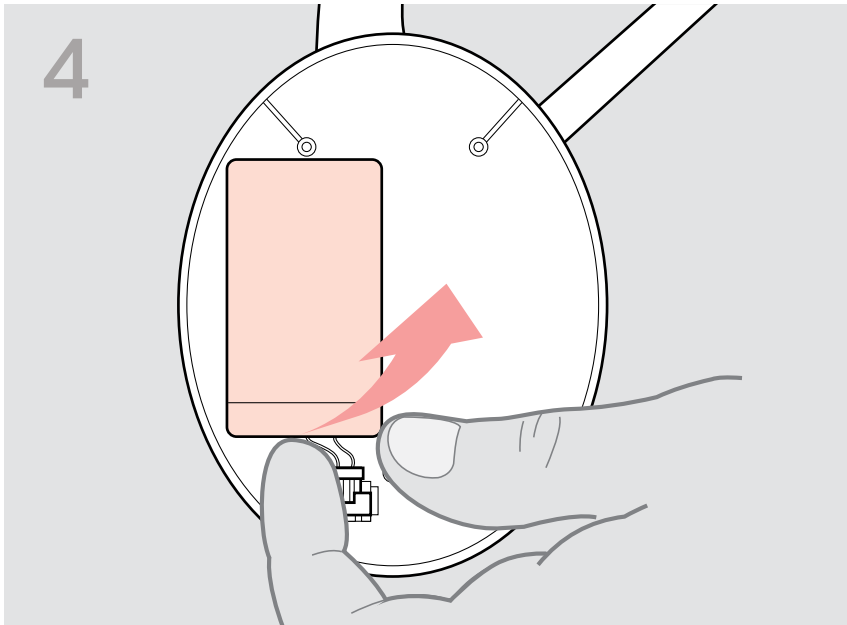

4. Lift the battery at the connector side.
5. Unplug the connector of the rechargeable battery.
6. Remove the rechargeable battery.




EPOS

C50

# Battery Removal Guide






# Battery Removal Guide

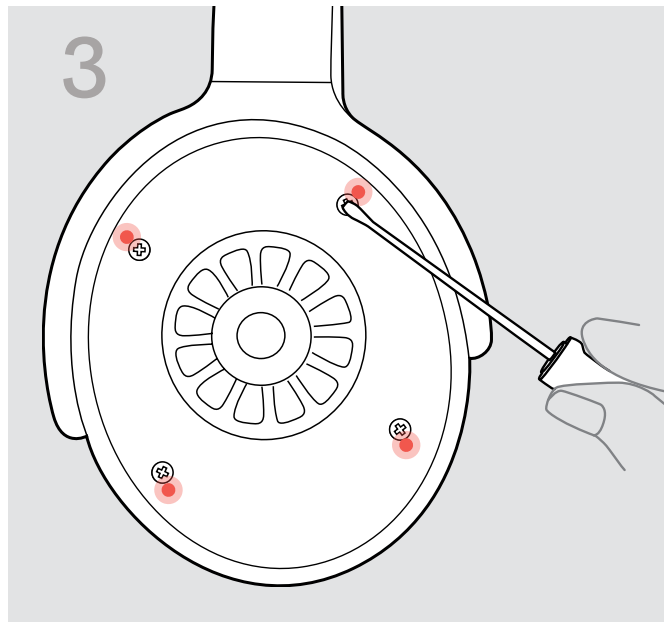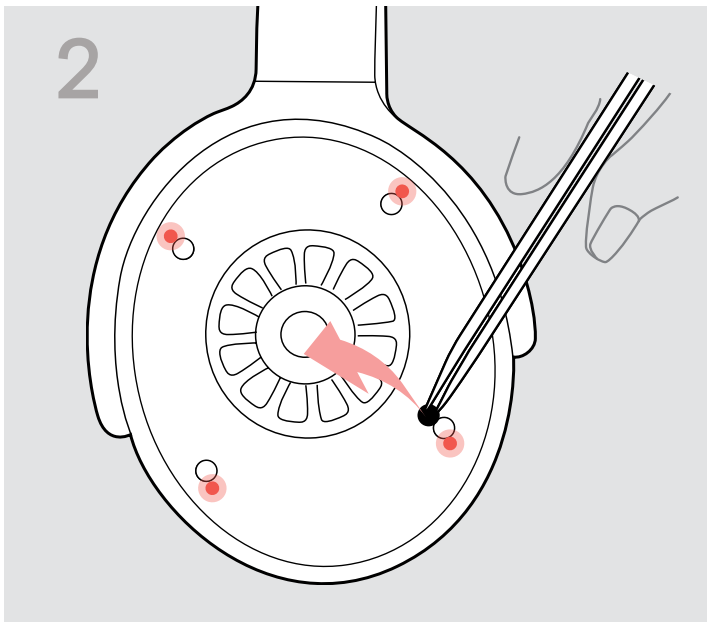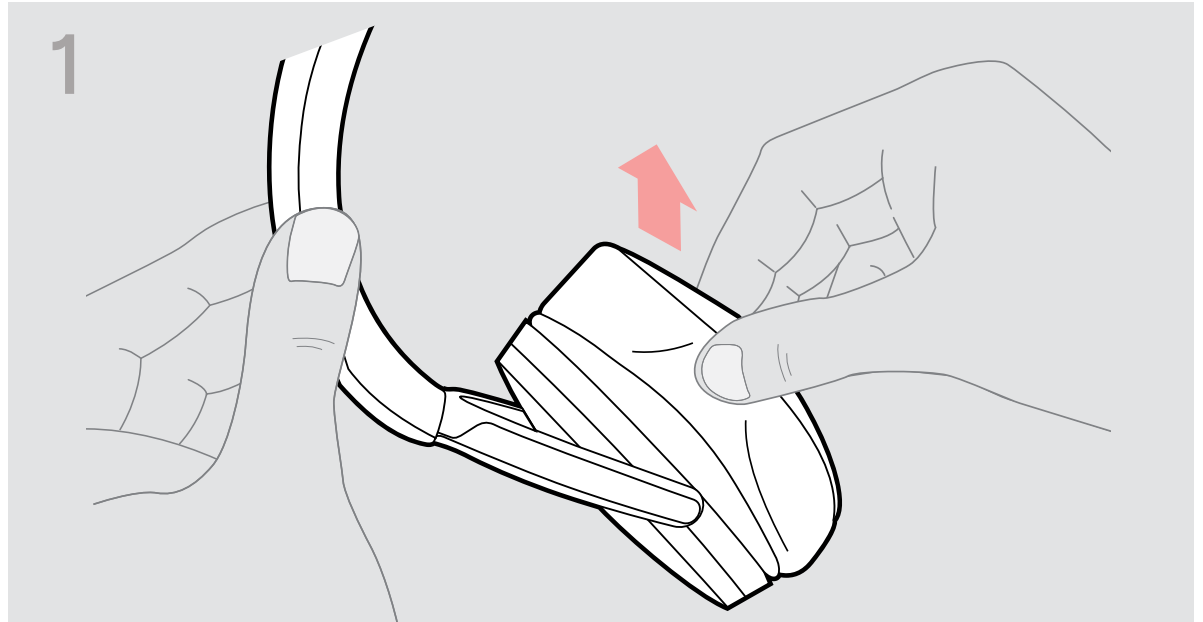



1. Remove the ear pad from the left ear cup (L marking on the headband & no microphone).
2. Remove the 4 screw hole stickers e.g. with a pair of tweezers.
3. Remove the 4 screws with a screwdriver.

# Battery Removal Guide

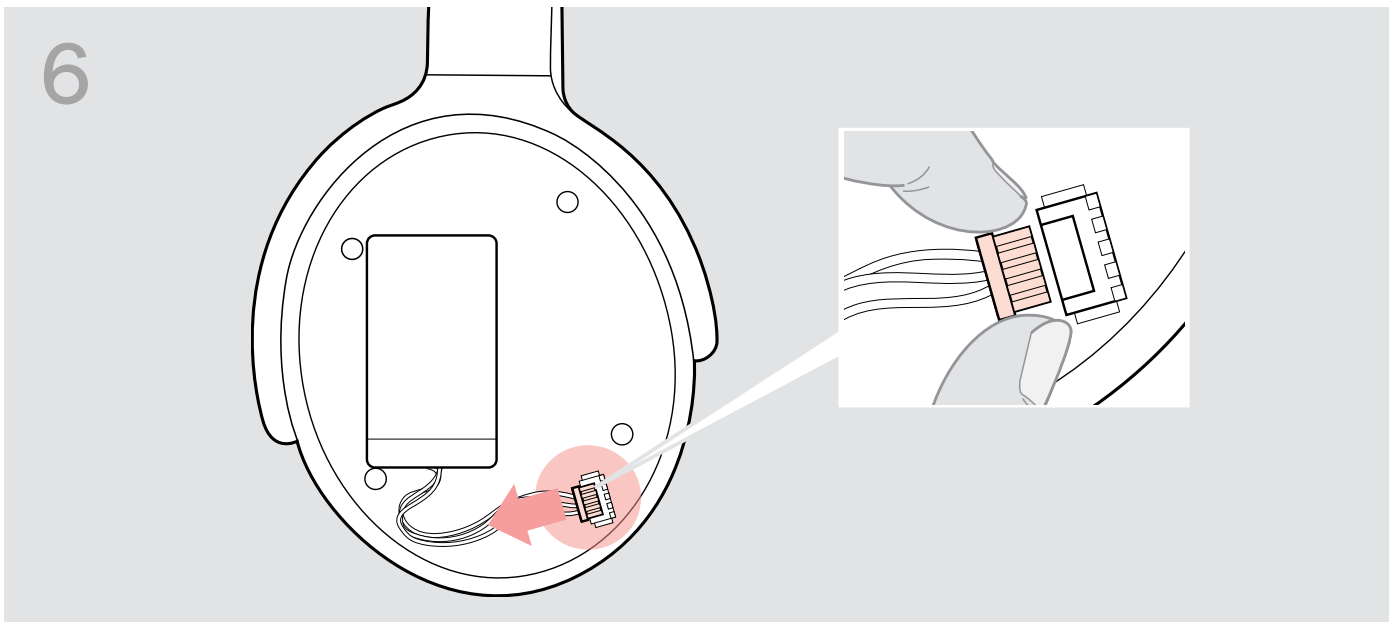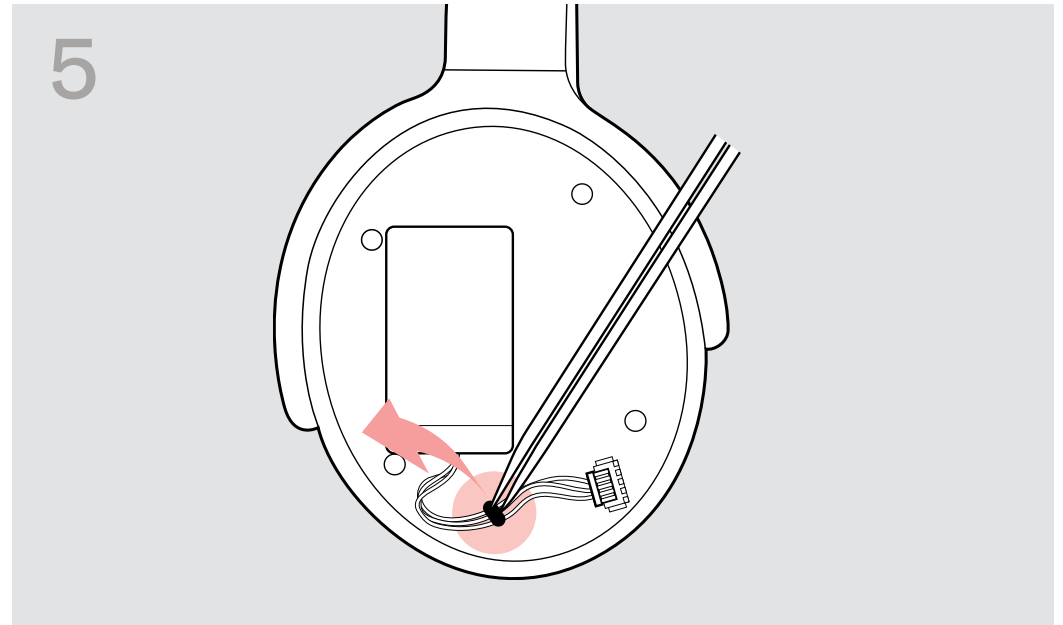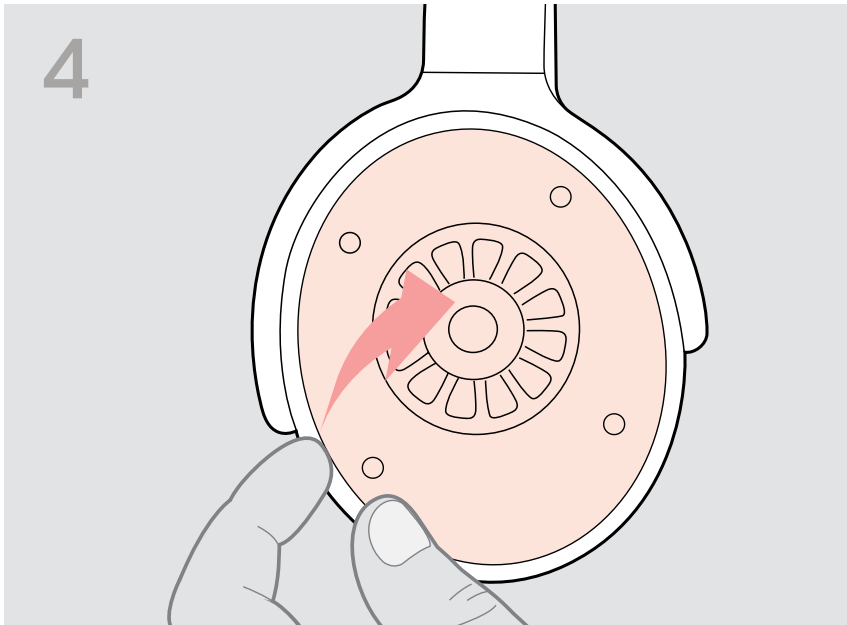

4. Lift the cover on the left-hand side.
5. Remove the glue that fixes the cable e.g. with a pair of tweezers.
6. Unplug the connector of the rechargeable battery.

# Battery Removal Guide

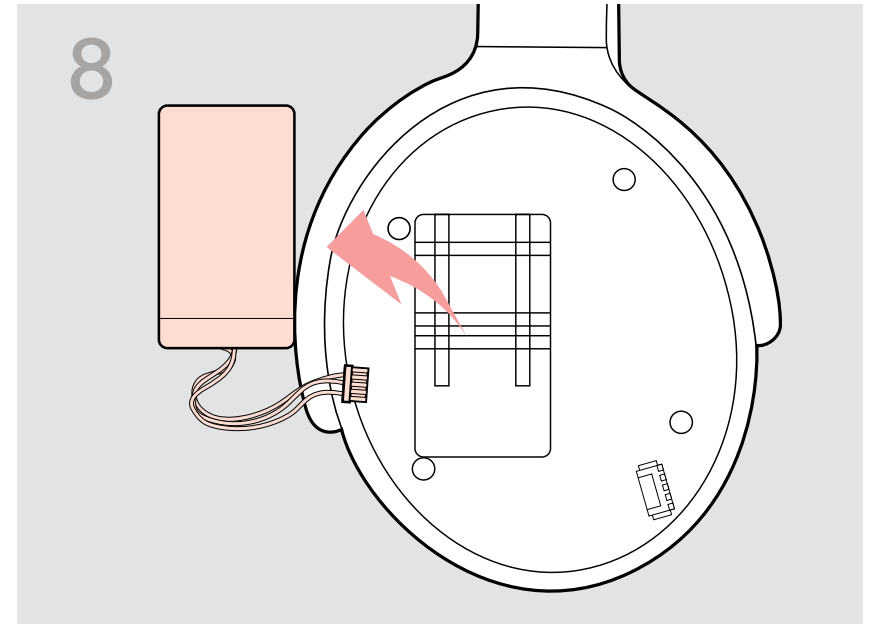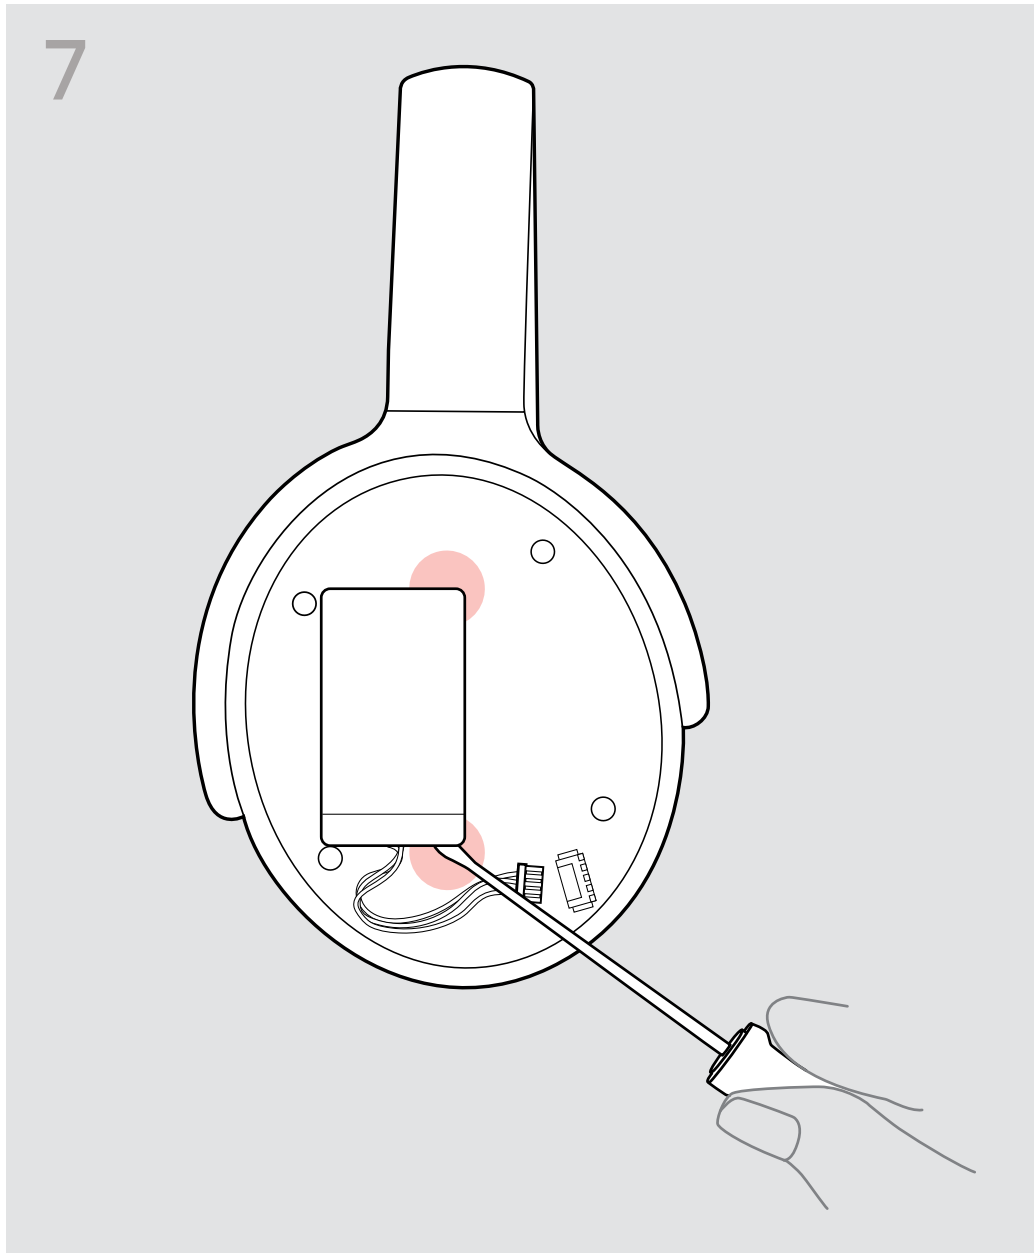

7. Carefully slide a small screwdriver under the two battery corners to loosen the rechargeable battery.
8. Remove the rechargeable battery.







EPOS

GSP 370

# Battery Removal Guide





# Battery Removal Guide

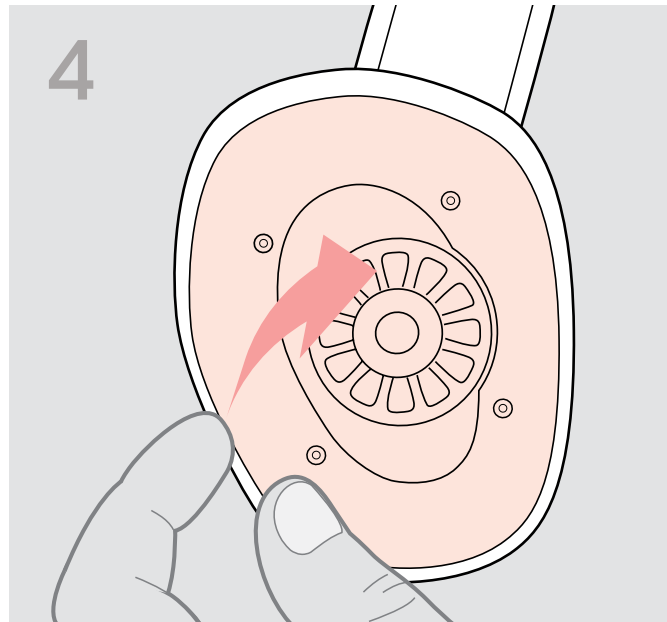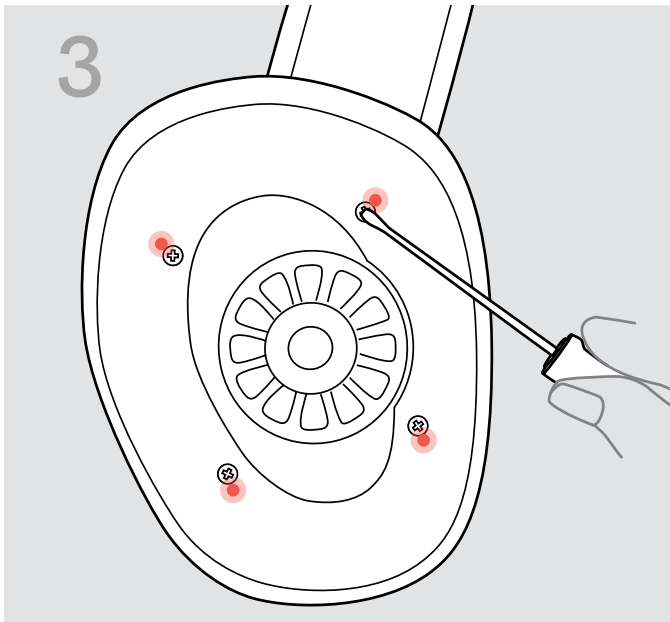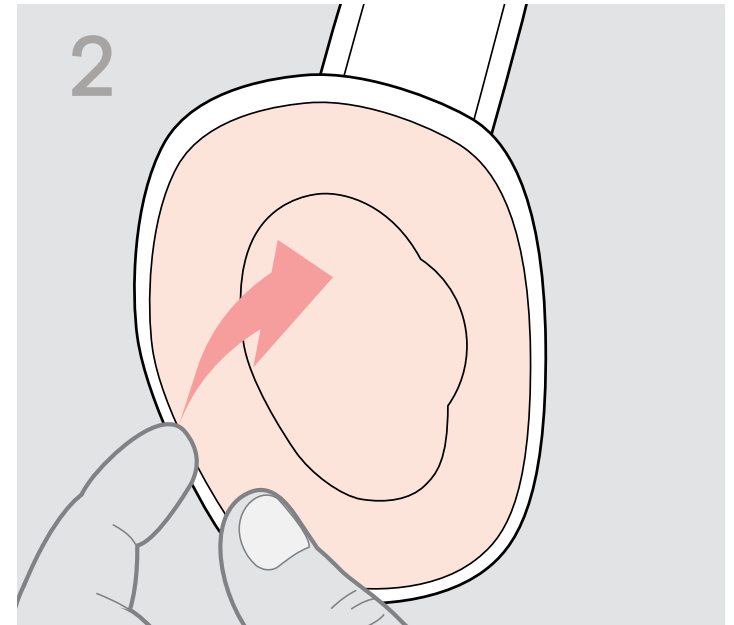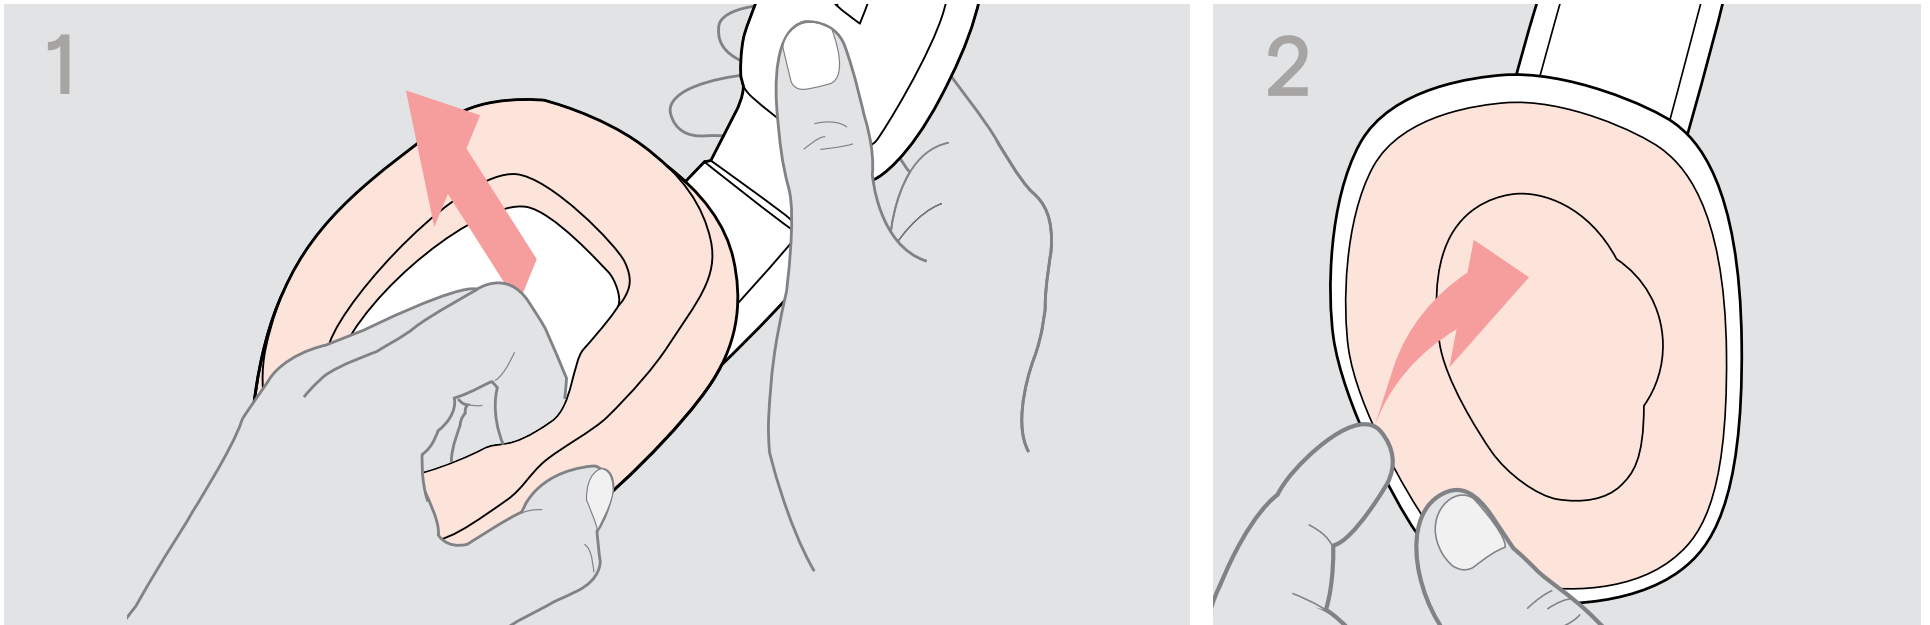

1. Remove the ear pad from the left ear cup: microphone side.
2. Take off the fabric mesh.
3. Remove the 4 screws with a screwdriver.
4. Lift the cover.

# Battery Removal Guide

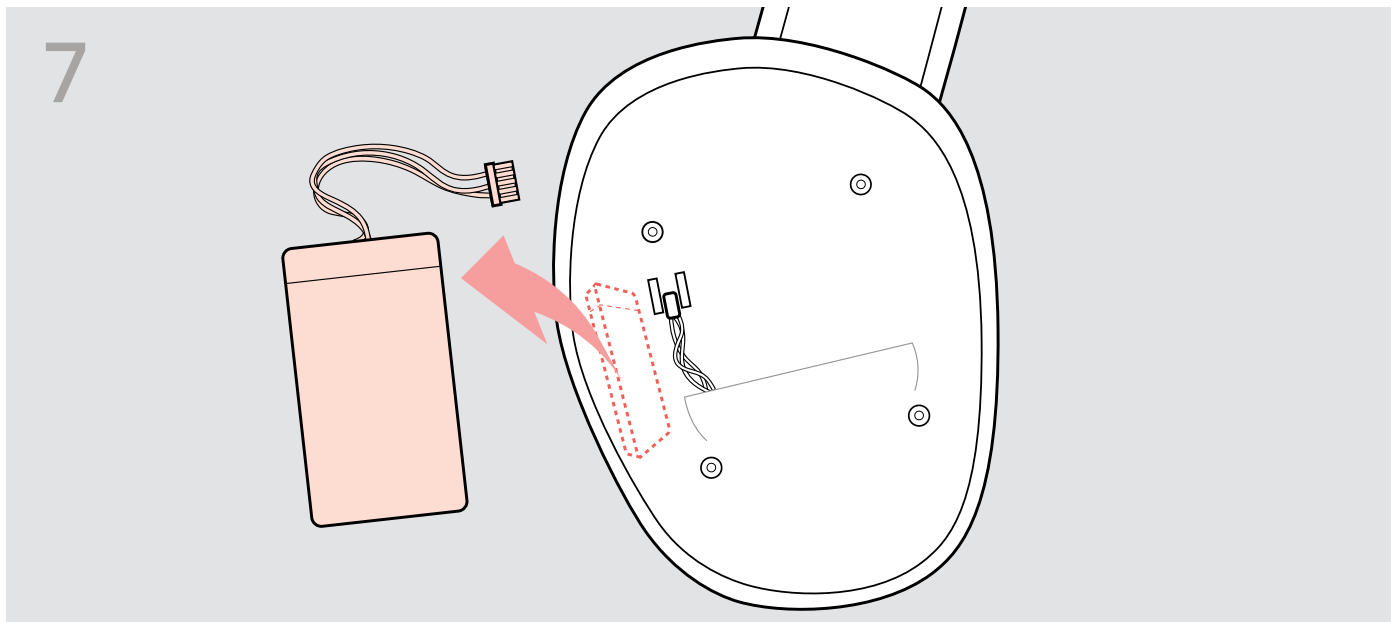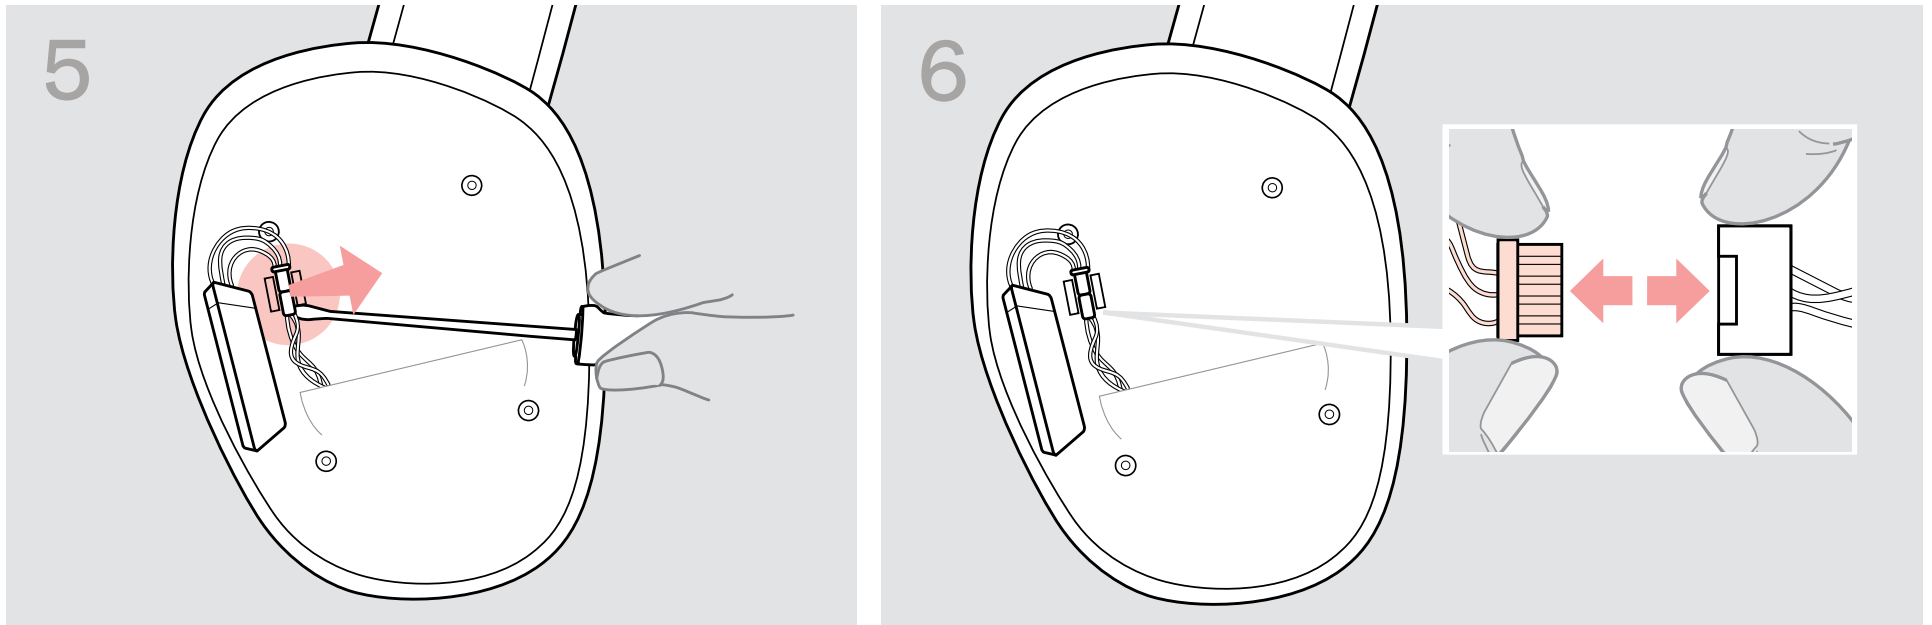

5. Release the connector from the housing with a screwdriver.
6. Unplug the connector.
7. Remove the rechargeable battery.





EPOS

GSP 670

# Battery Removal Guide







# Battery Removal Guide

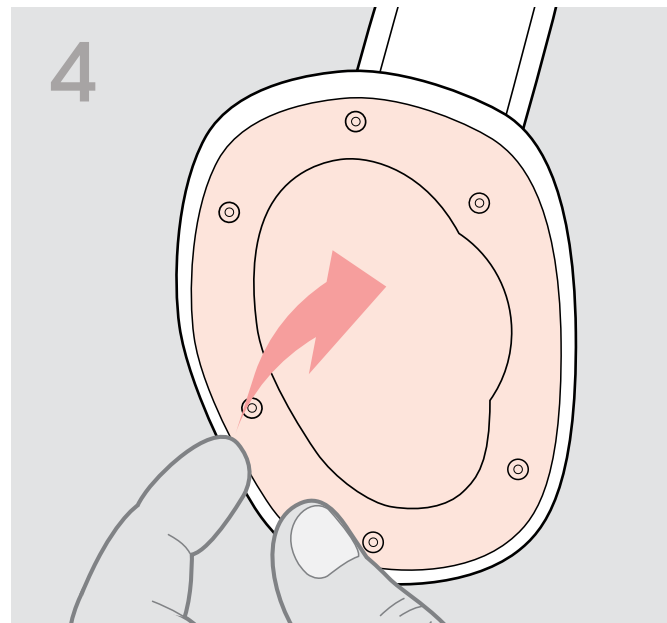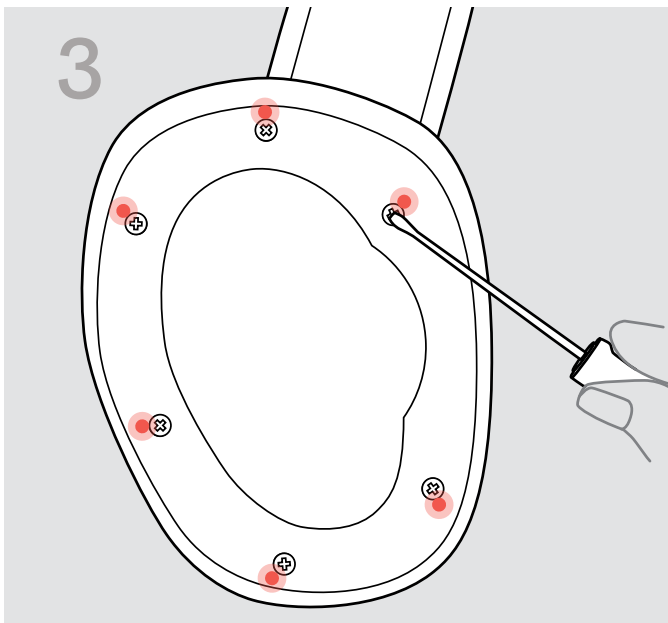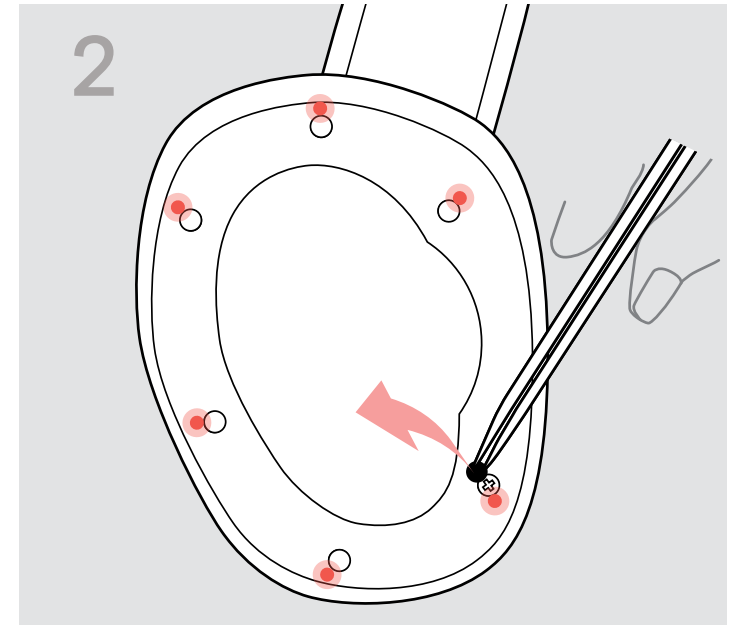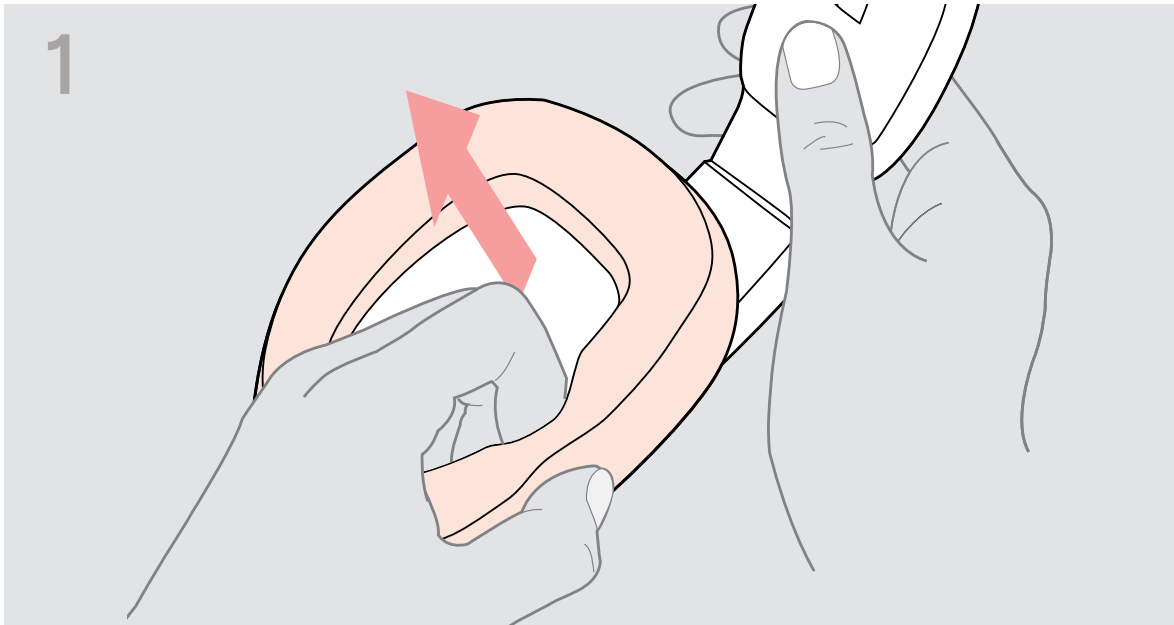

1. Remove the ear pad from the left ear cup: microphone side.
2. Remove the 6 screw hole stickers e.g. with a pair of tweezers.
3. Remove the 6 screws with a screwdriver.
4. Lift the cover on the left-hand side.

# Battery Removal Guide

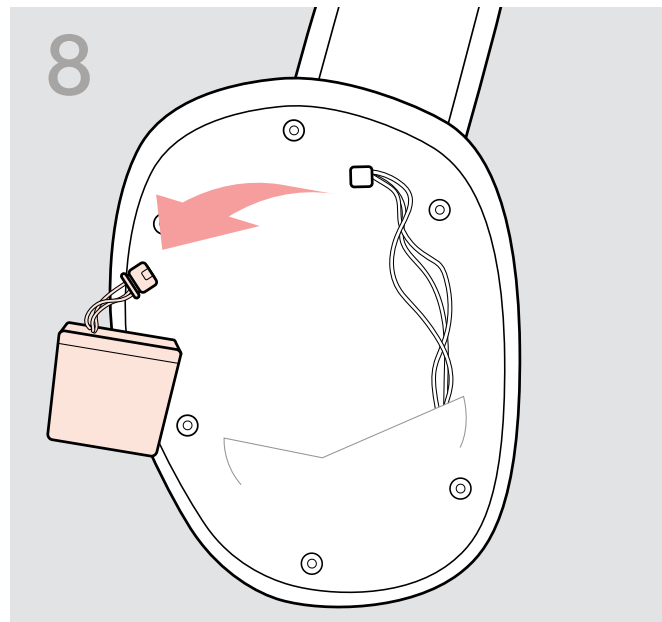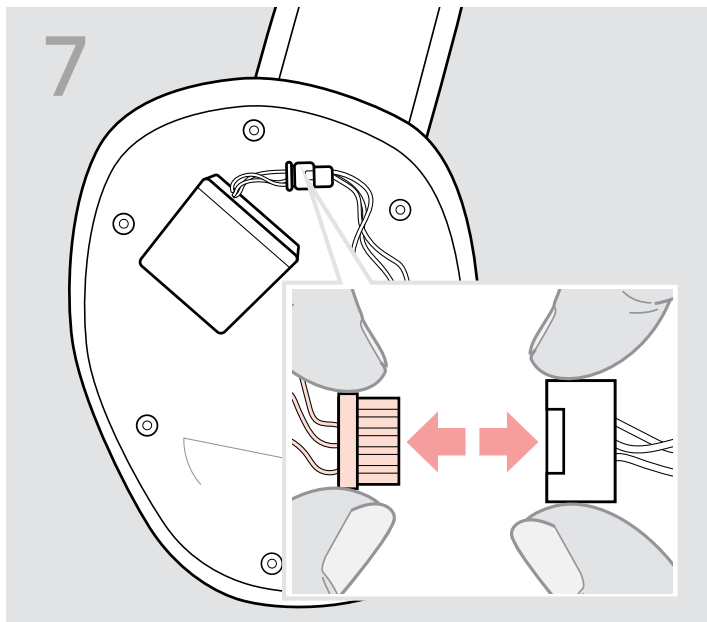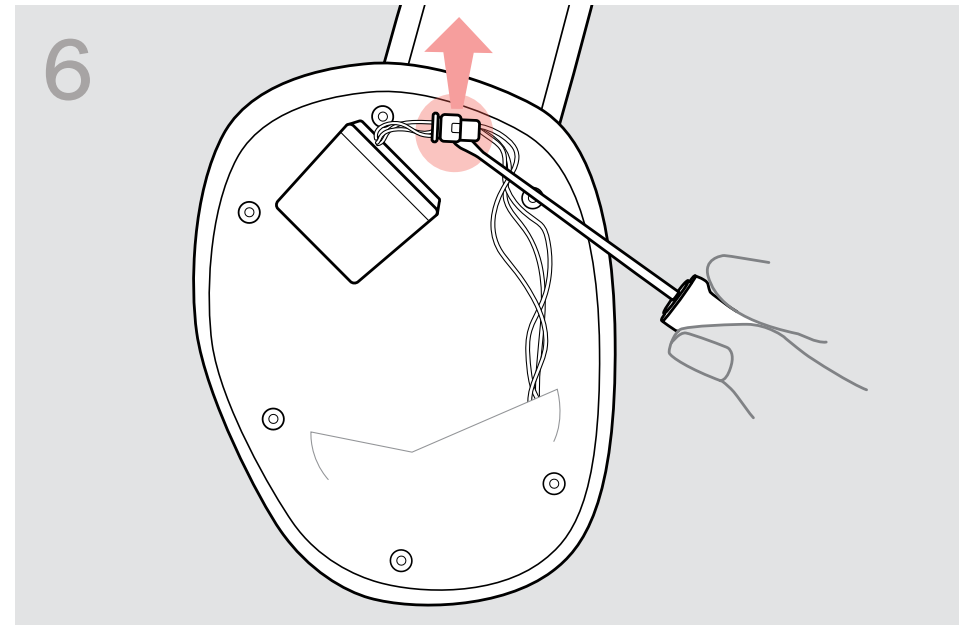
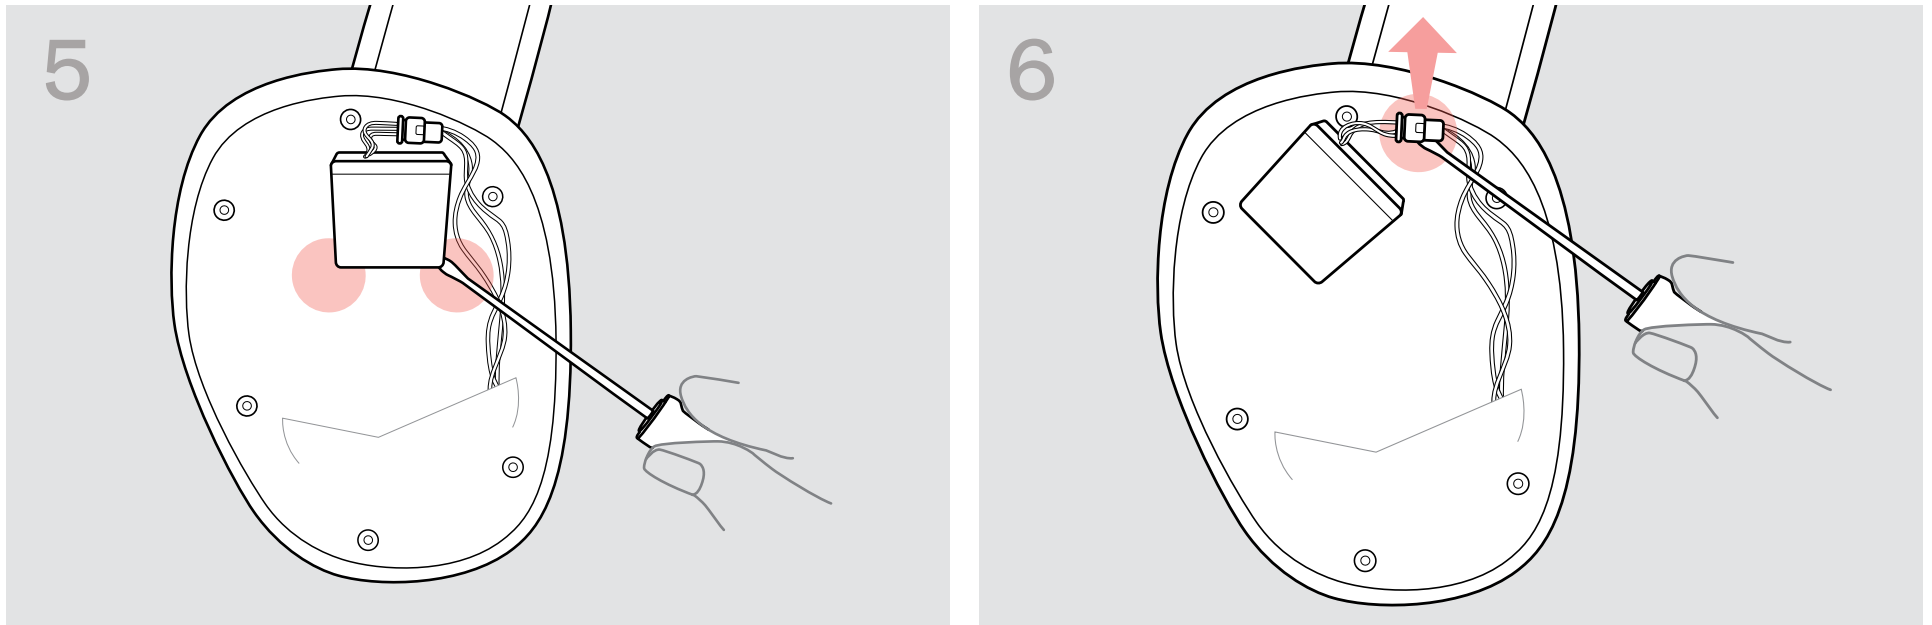


5. Carefully slide a small screwdriver under the two battery corners to loosen the rechargeable battery.
6. Release the connector from the housing with a screwdriver.
7. Unplug the connector.
8. Remove the rechargeable battery.






# EPOS

GTW 270 | GTW 270 Hybrid

## Battery Removal Guide

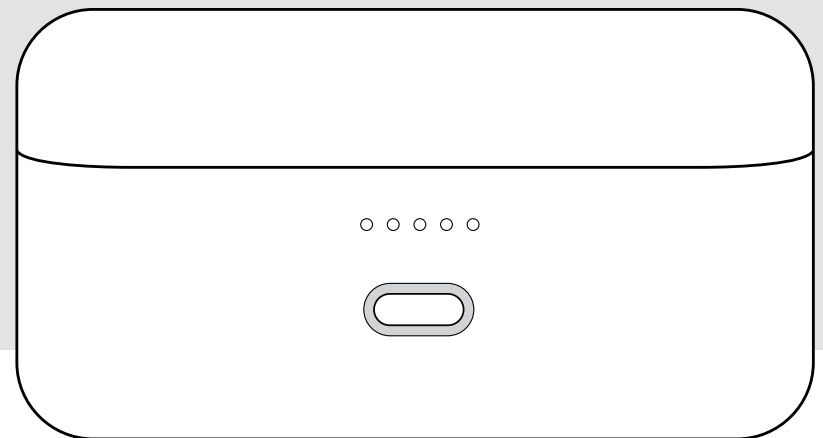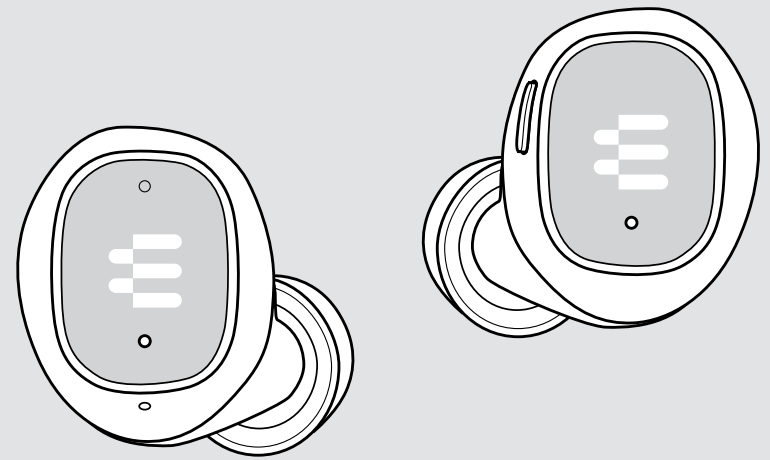

# Battery Removal Guide

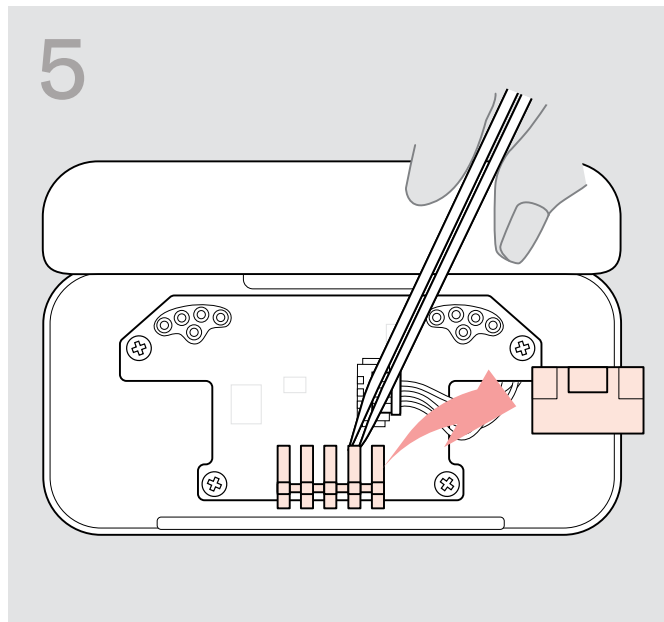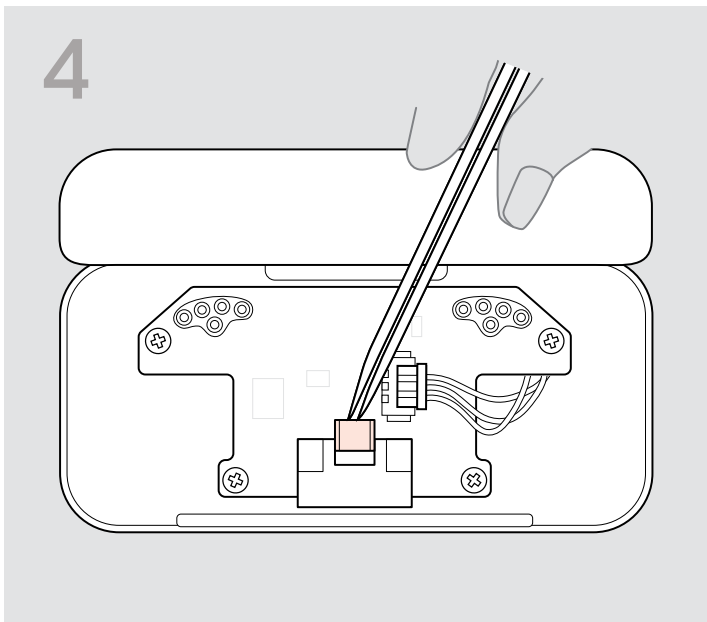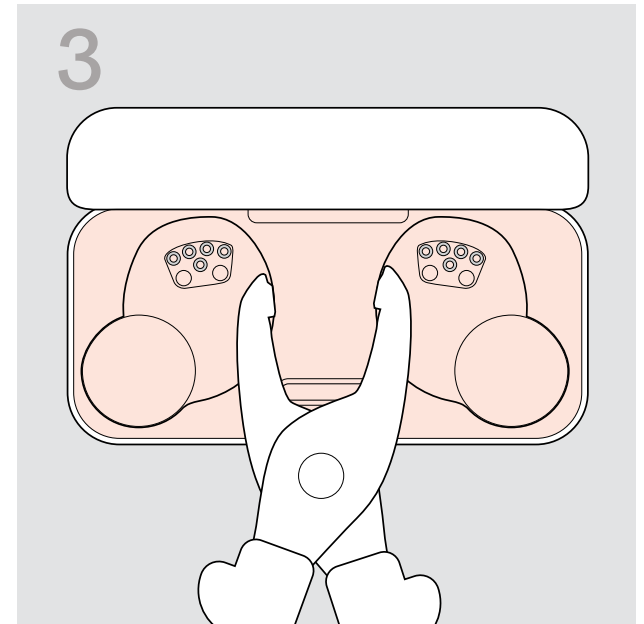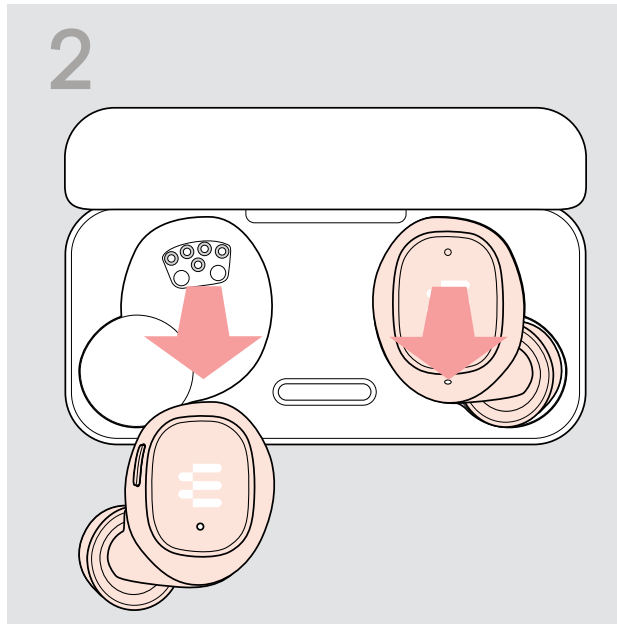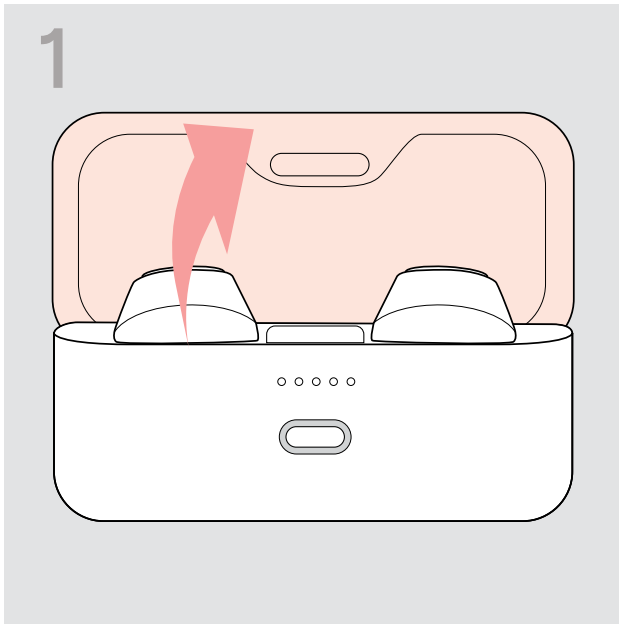


1. Open the lid.
2. Undock both earbuds.
3. Grab into the earbud holders e.g. with pliers and remove the whole plate.
4. Remove the lock of the black shading cotton e.g. with a pair of tweezers.
5. Remove the black shading cotton and transparent support column.




# Battery Removal Guide


6

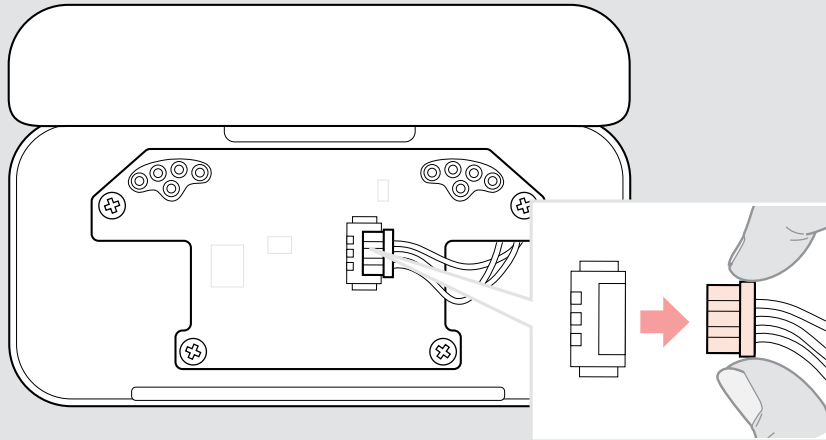


7

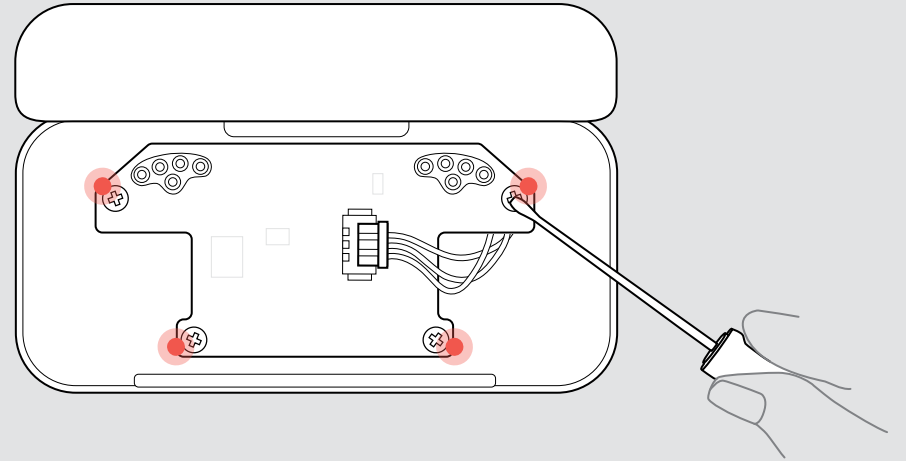

8


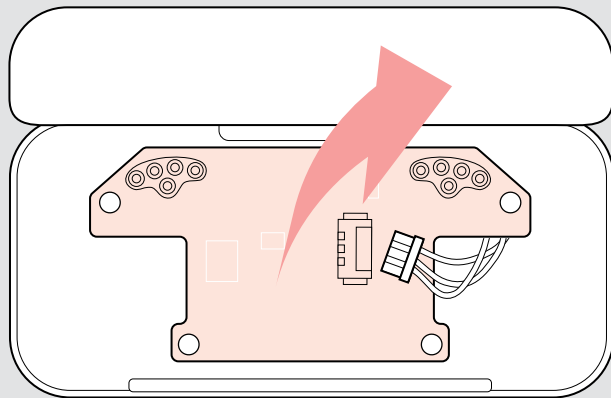


9

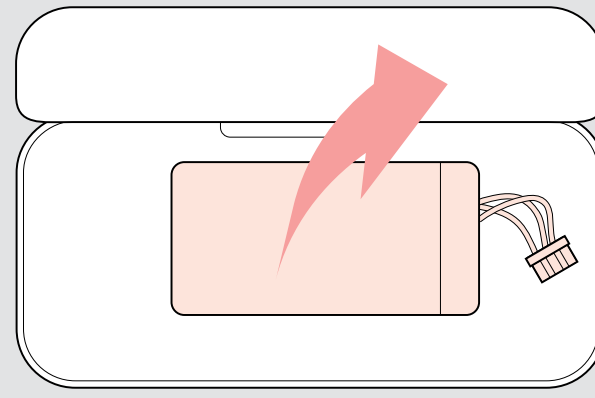

6. Unplug the connector of the rechargeable battery.
7. Remove the 4 screws with a screwdriver.
8. Lift the main board.
9. Remove the rechargeable battery.




# Battery Removal Guide

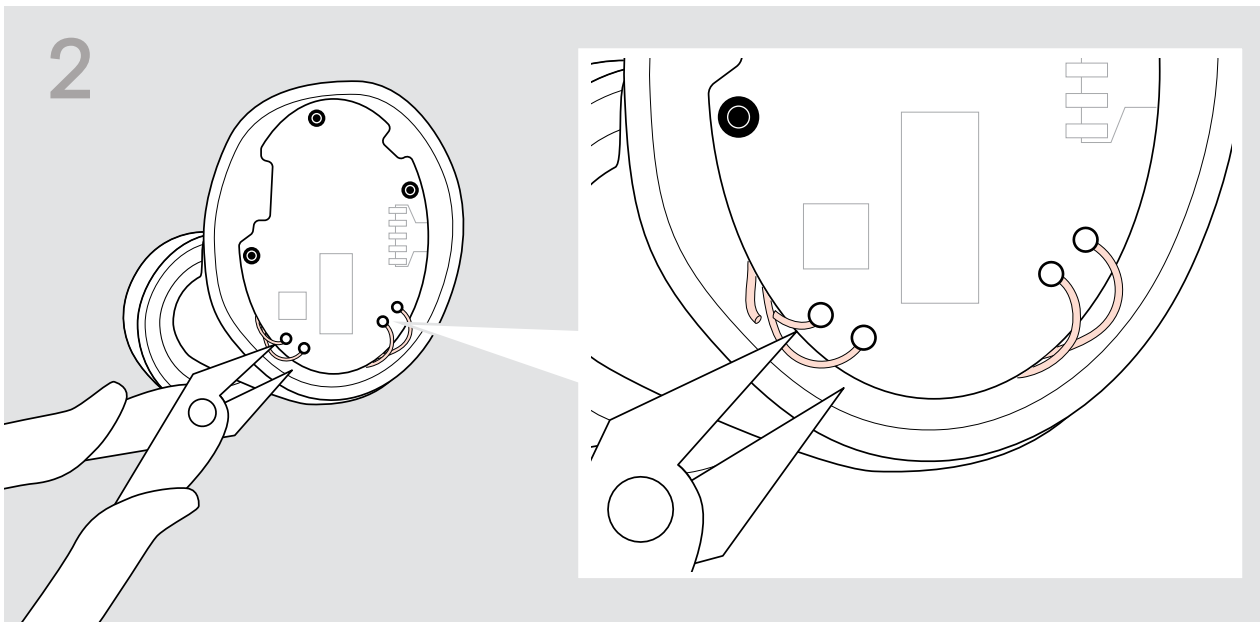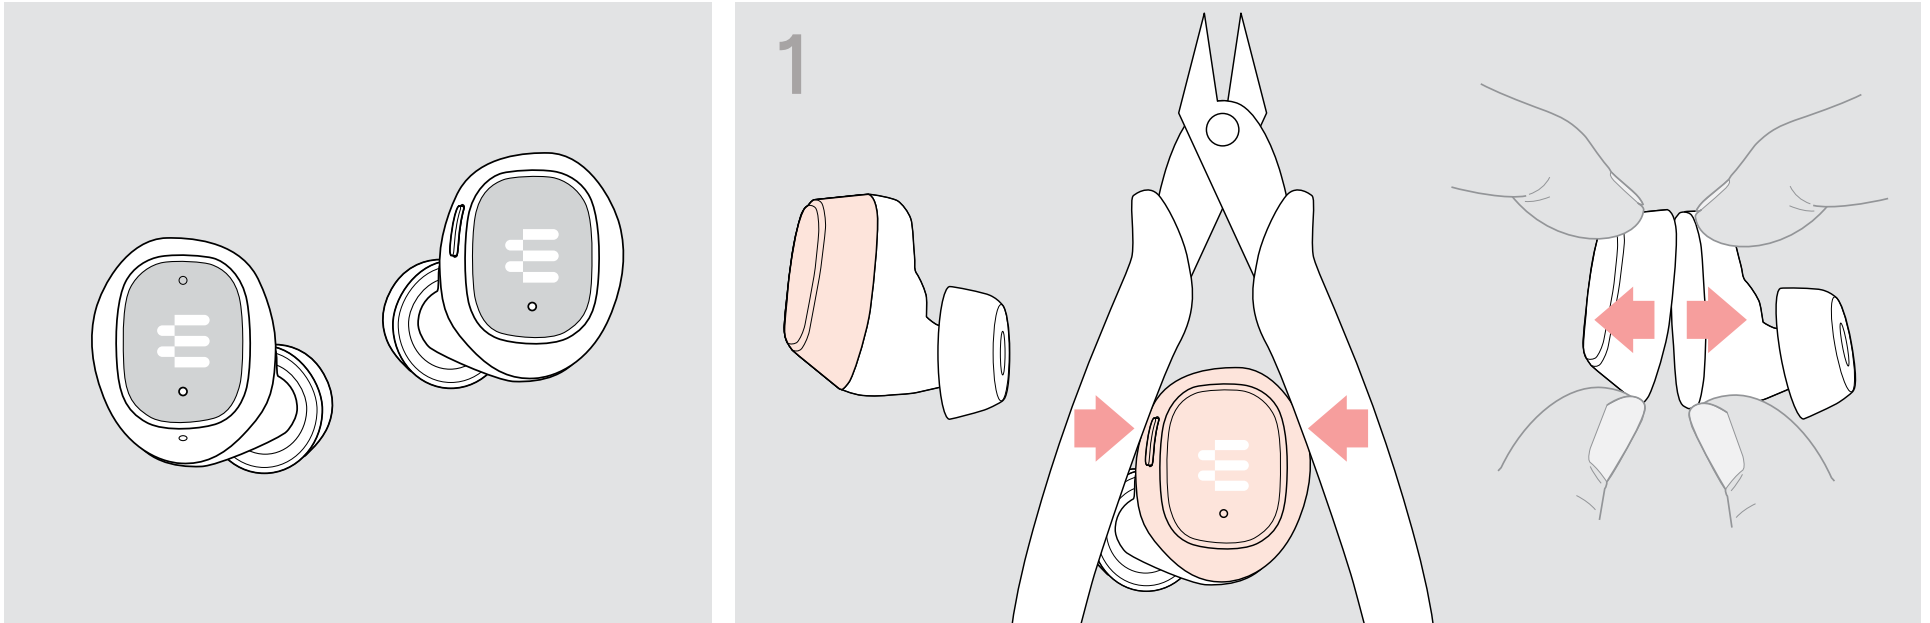

The following steps are required for both earbuds:

1. Clamp and squeeze the earbud's top shell e.g. with a pliers handle and remove it.
2. Cut the 4 cables.

# Battery Removal Guide

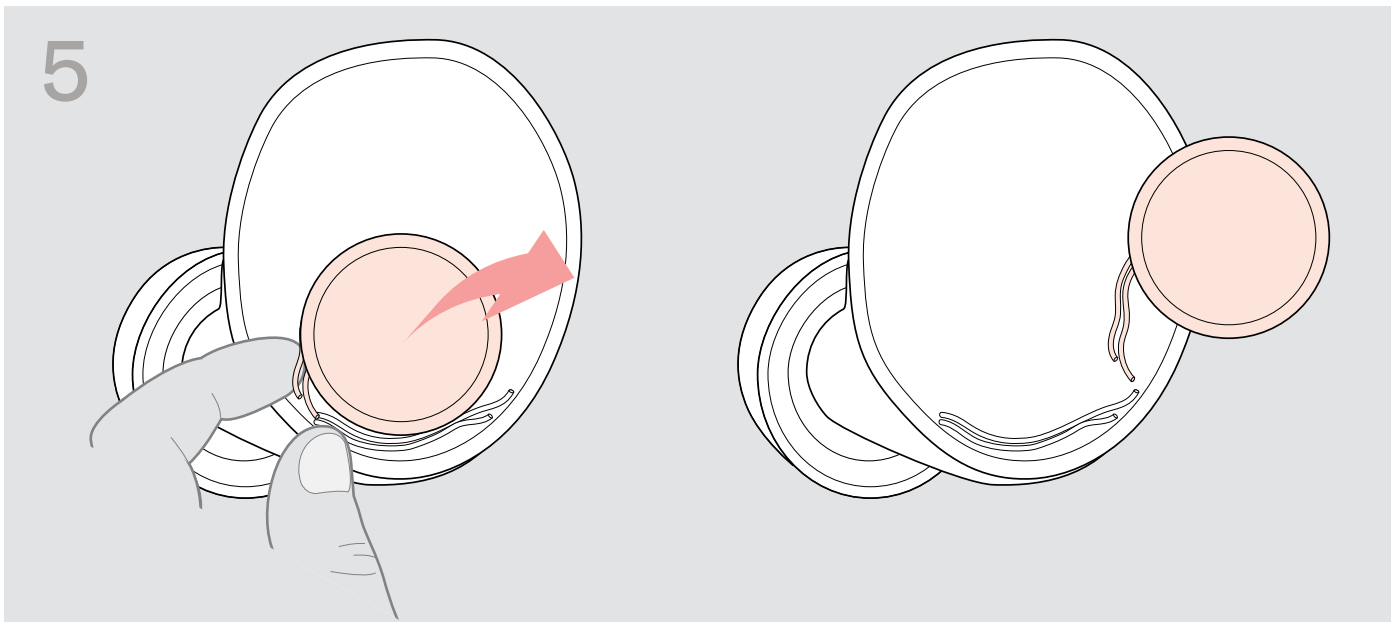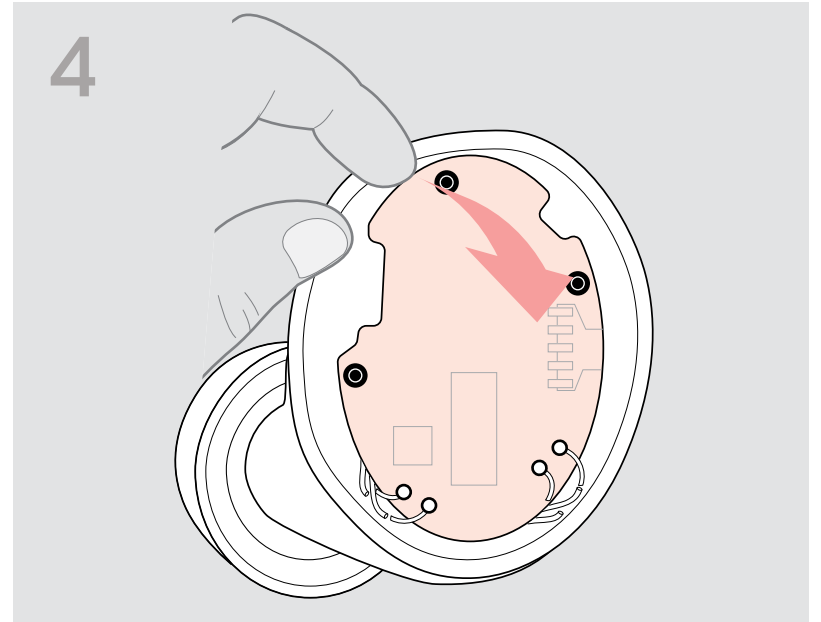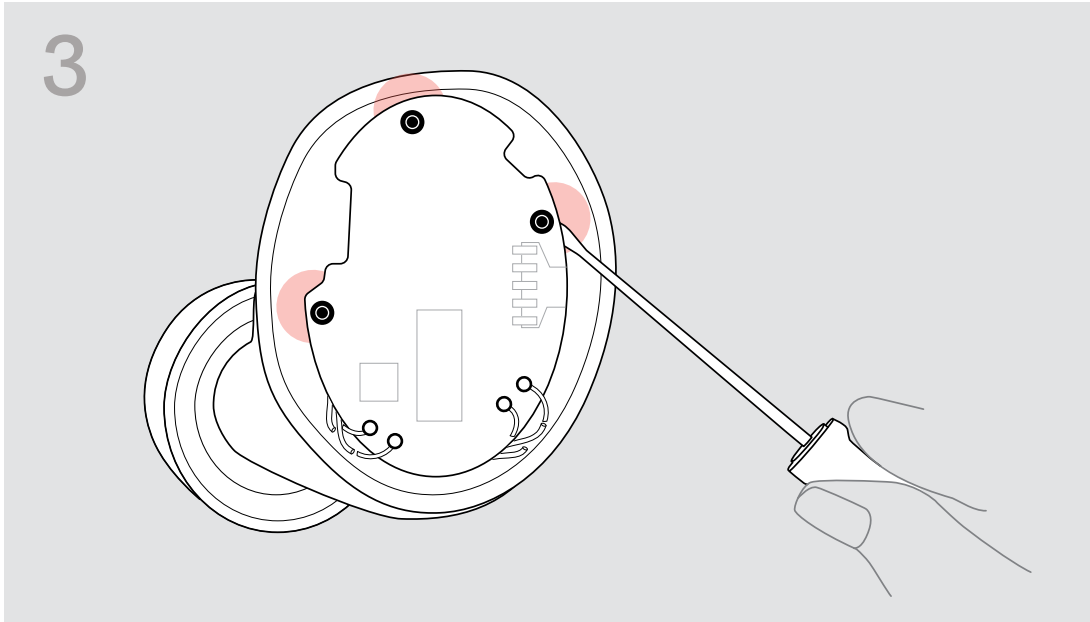

- 3. Loosen the main board at the 3 holders e.g. with a screwdriver.
- 4. Lift the main board.
- 5. Remove the rechargeable battery.





# EPOS

H3 Hybrid | H3PRO Hybrid

## Battery Removal Guide







# Battery Removal Guide

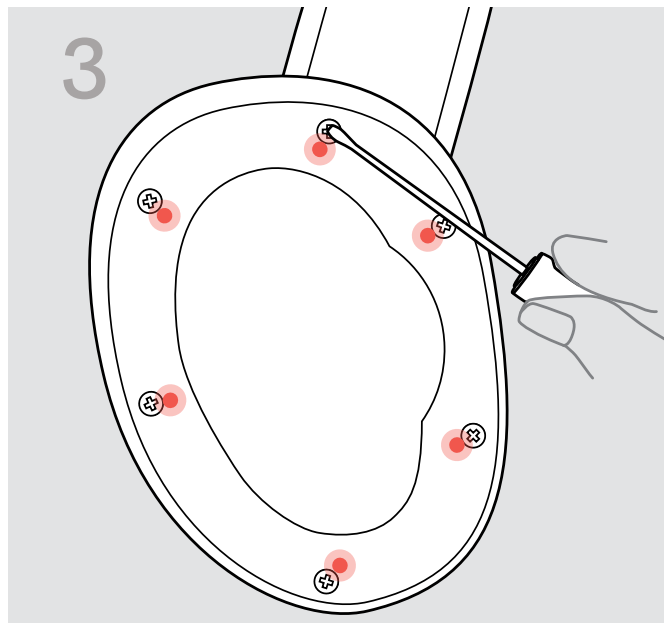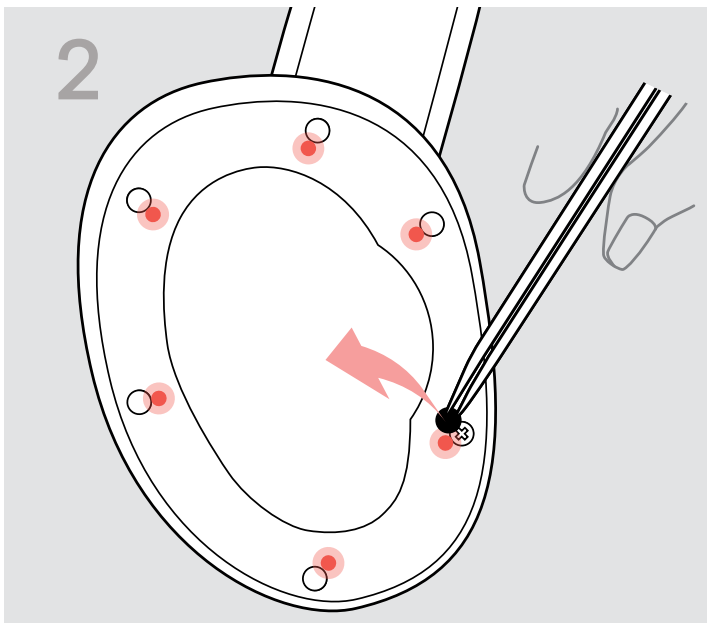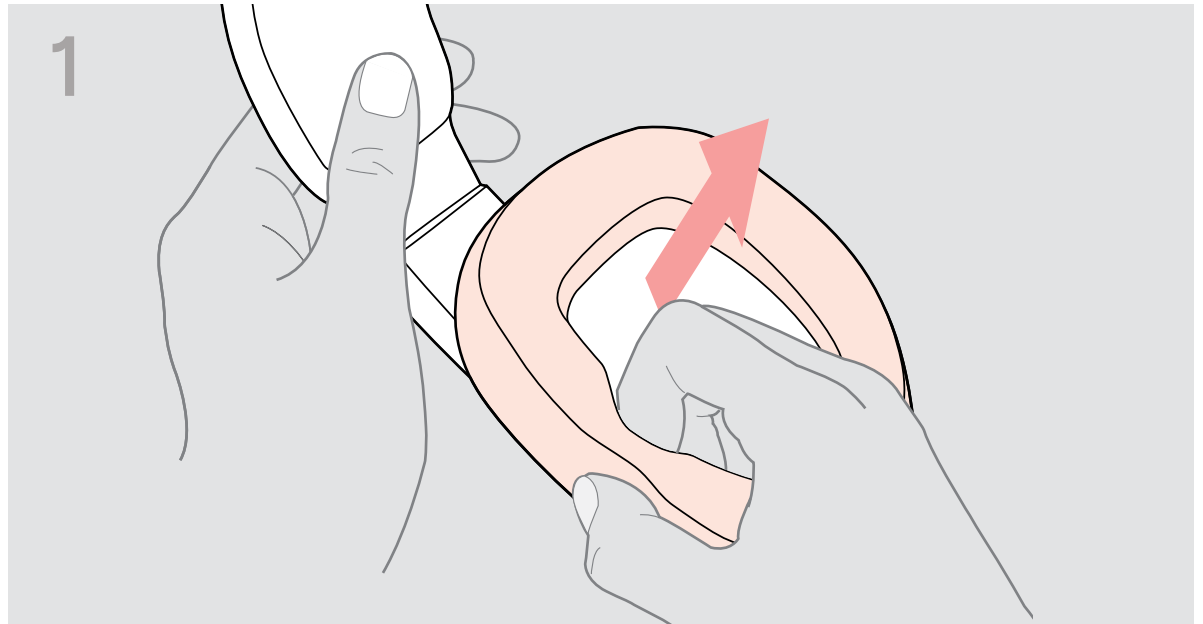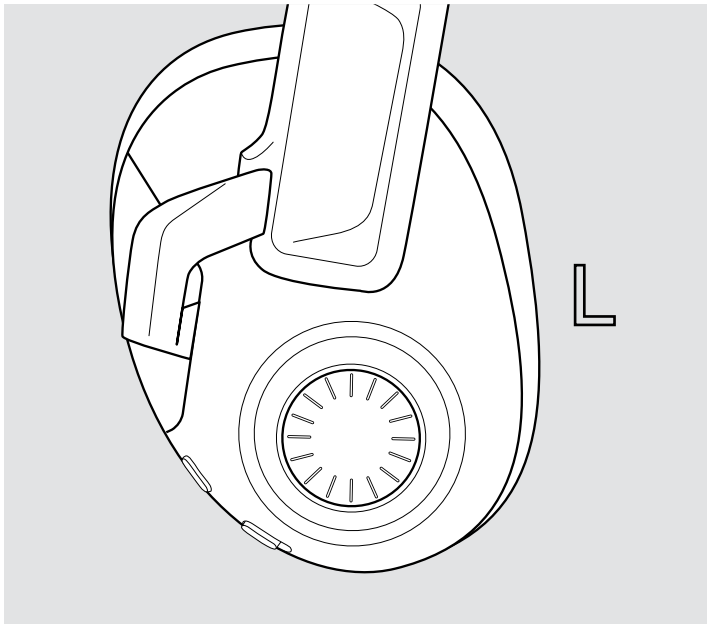

1. Remove the ear pad from the left ear cup (L marking on the headband & no microphone).
2. Remove the 6 screw hole stickers e.g. with a pair of tweezers.
3. Remove the 6 screws with a screwdriver.

# Battery Removal Guide

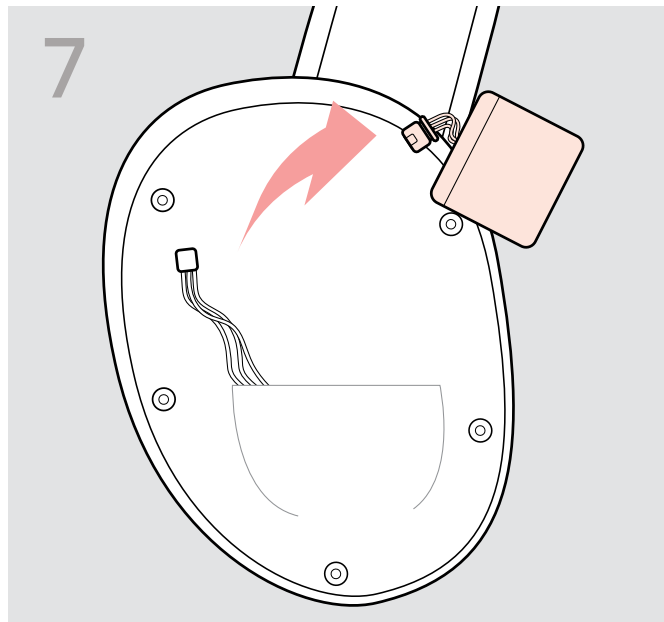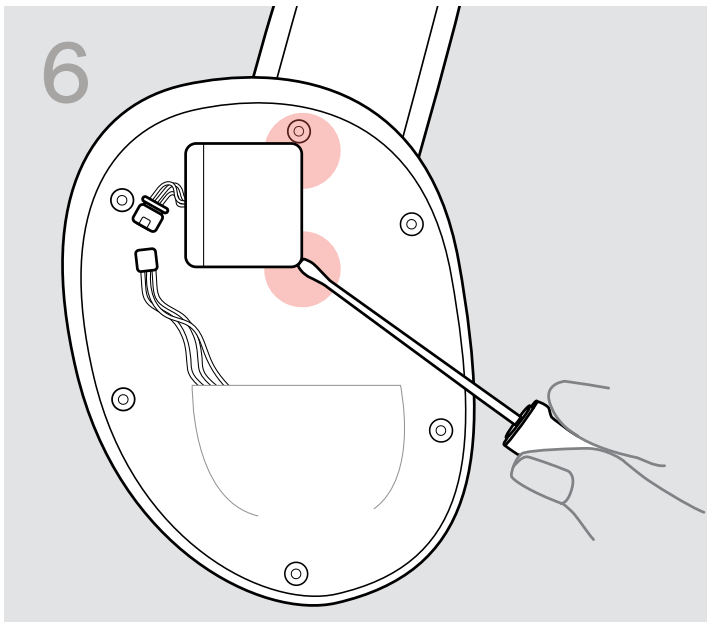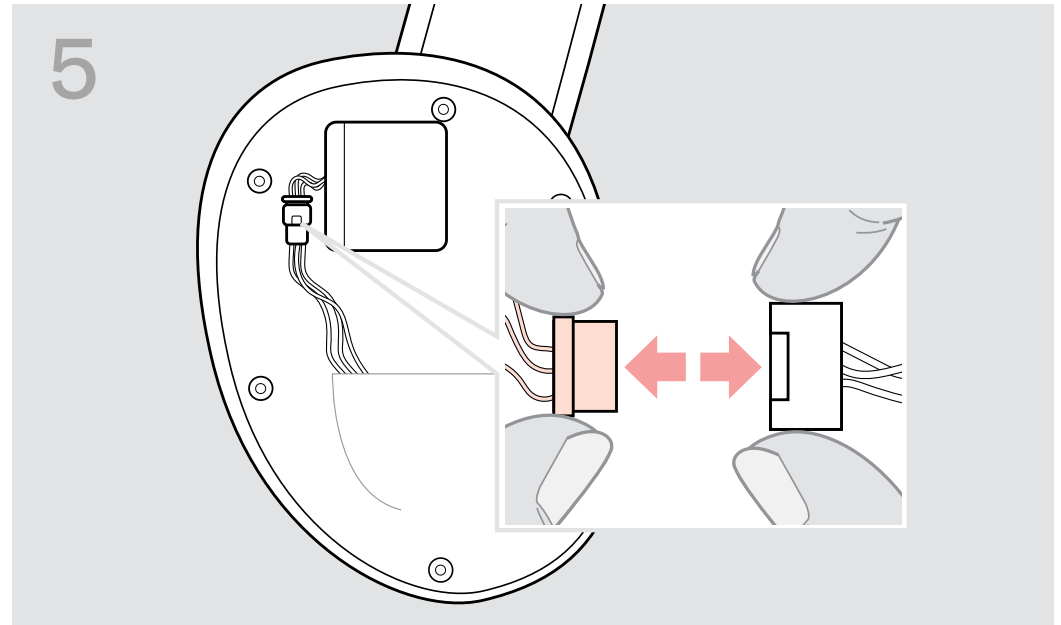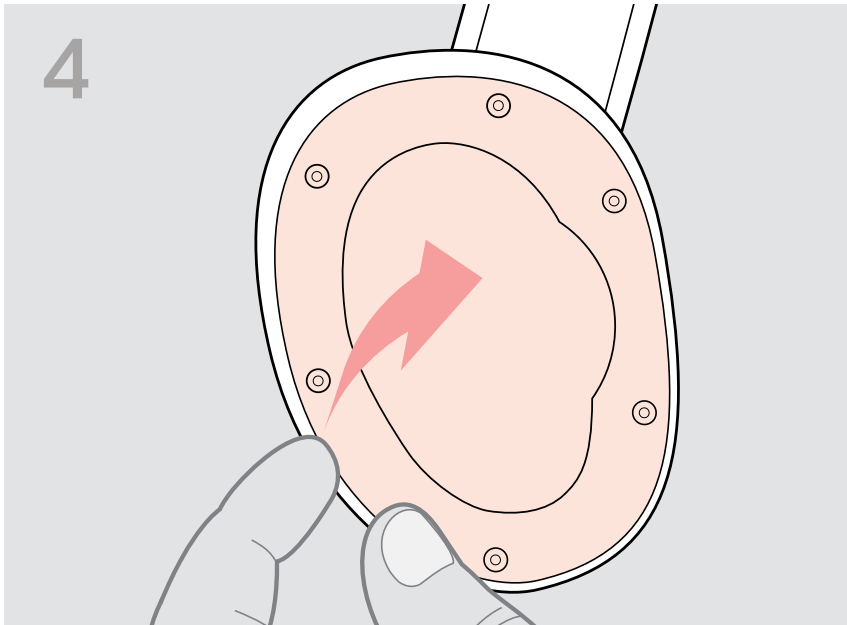

4. Lift the cover on the left-hand side.
5. Lift and unplug the connector of the rechargeable battery.
6. Carefully slide a small screwdriver under the two battery corners to loosen the rechargeable battery.
7. Remove the rechargeable battery.